



# Illustrated Parts List

## Model Series

# 118400

TYPE NUMBERS  
0036 Through 0152.



### TABLE OF CONTENTS

Air Cleaner .....	6
Alternator .....	8
Blower Housing .....	9
Camshaft .....	4
Carburetor .....	7
Controls .....	8
Control Panel .....	8
Crankcase Cover .....	4
Crankshaft .....	4
Cylinder .....	2
Cylinder Head .....	3
Exhaust System .....	12
Flywheel .....	5
Fuel Supply .....	10
Gasket Set - Engine .....	2
Gasket Set - Valve .....	3
Governor Spring .....	8
Ignition .....	5
Kit - Carburetor Overhaul .....	7
Oil Sensor Group .....	13
Piston, Rings, Connecting Rod .....	2
Rewind Starter .....	11
Valves .....	3








PRINTED IN U.S.A.










COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

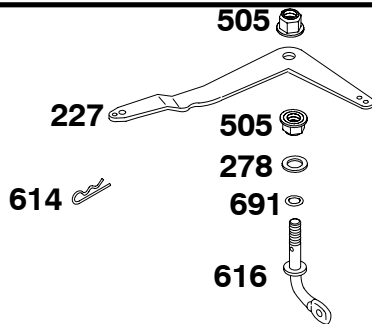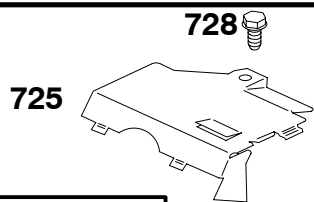



1058 OPERATOR'S MANUAL

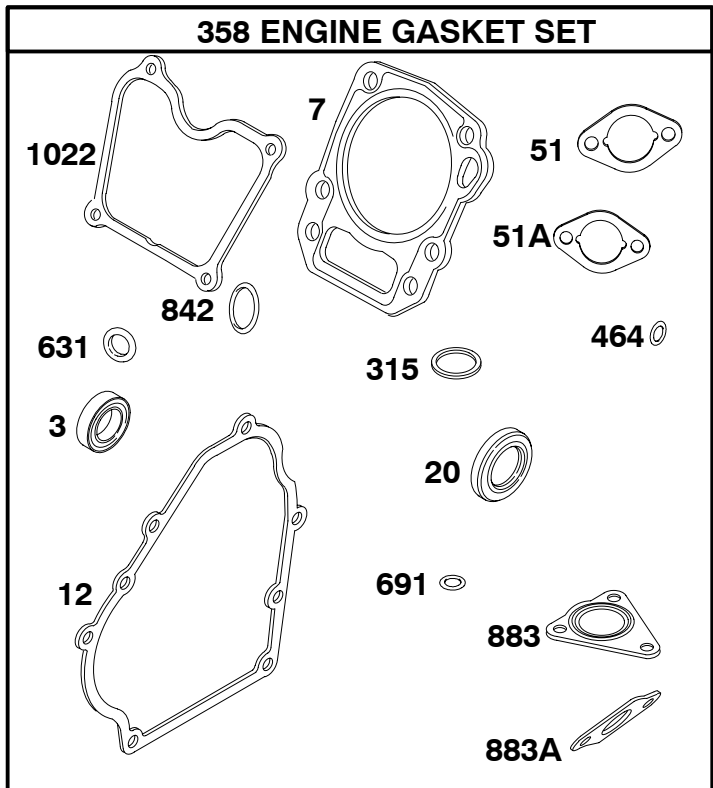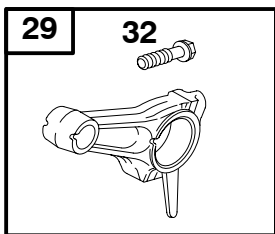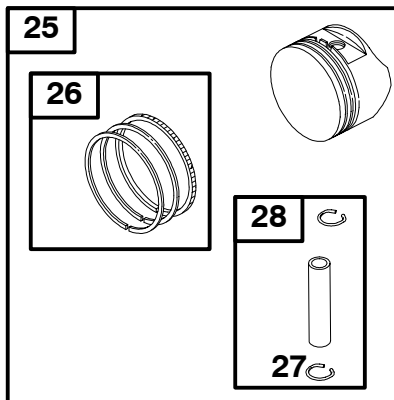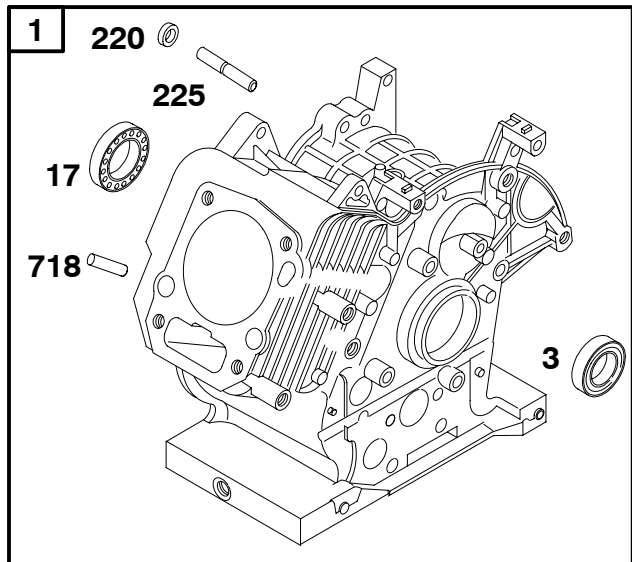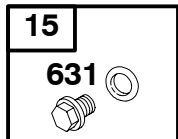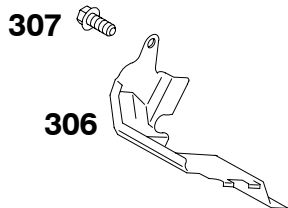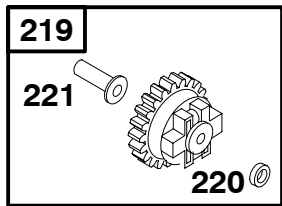


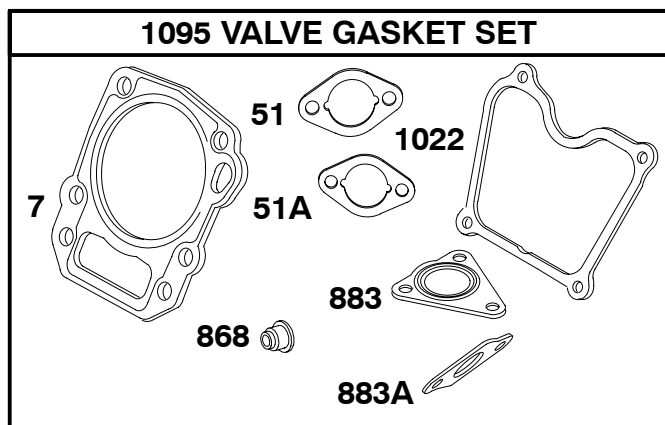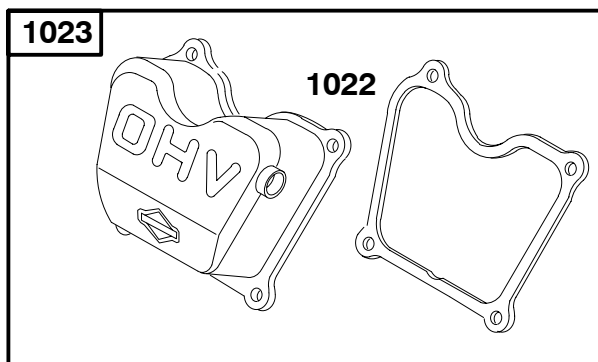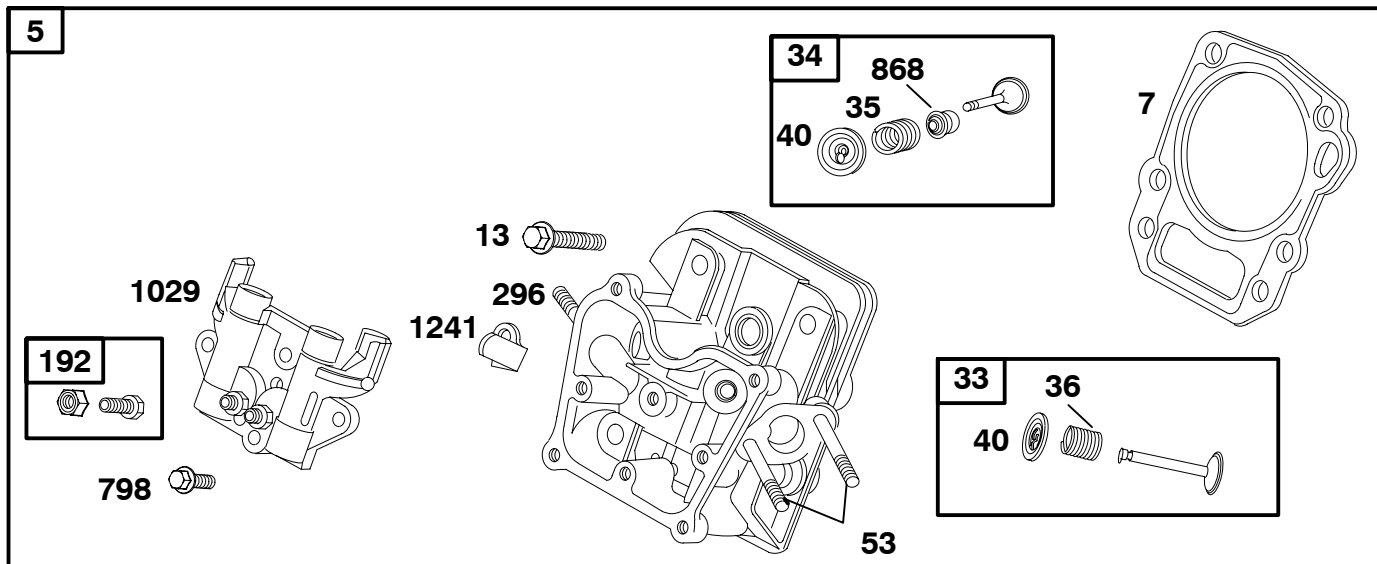


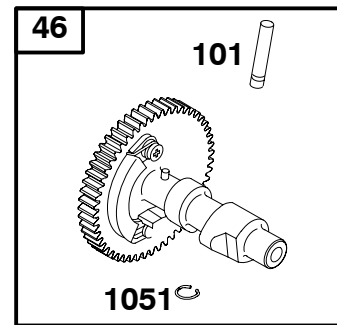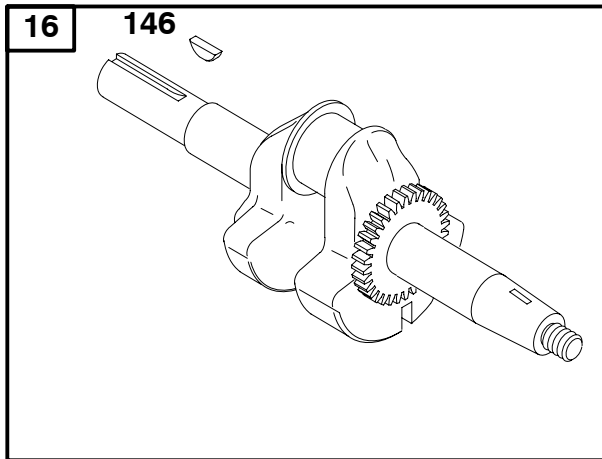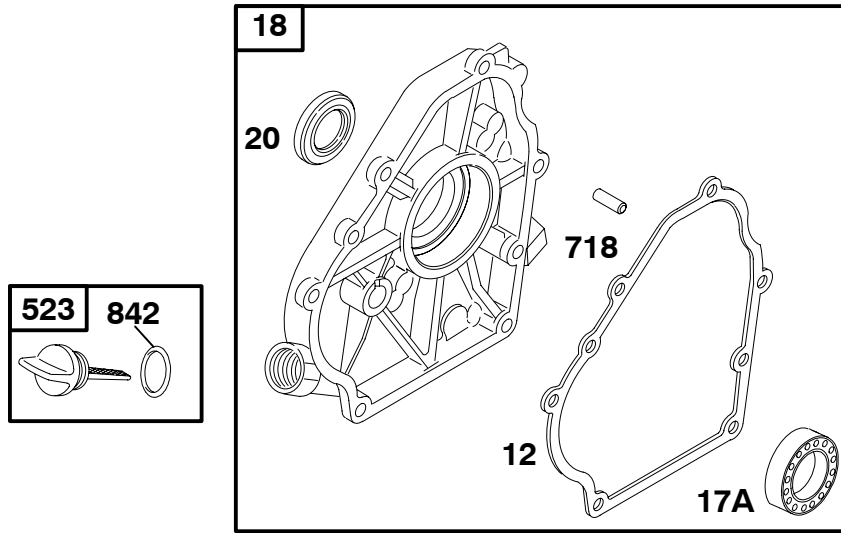

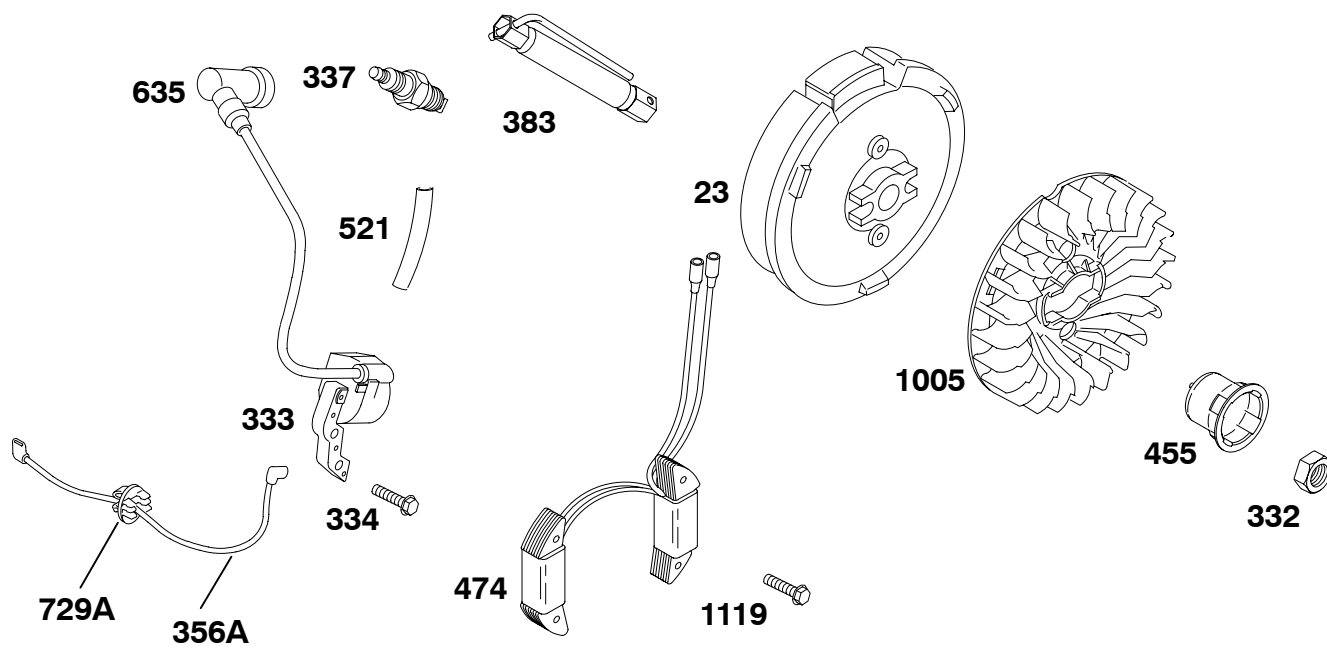


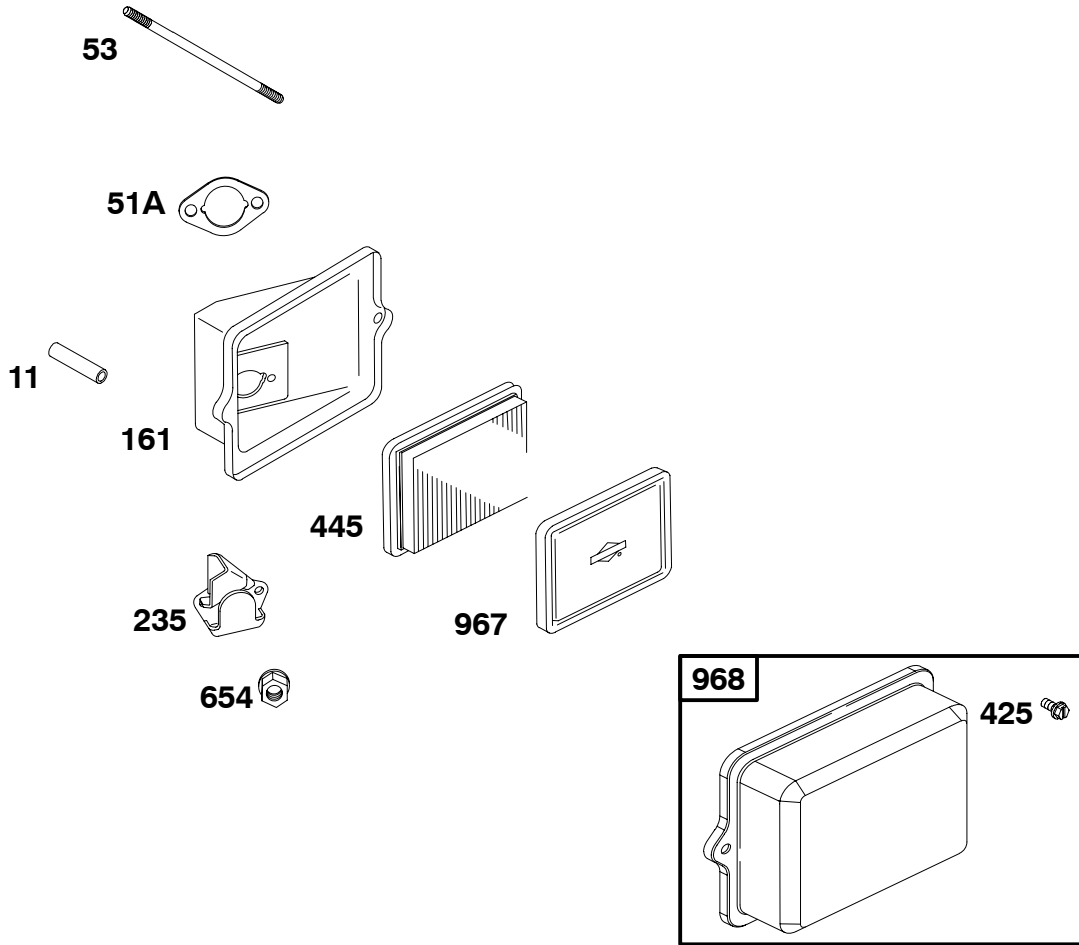




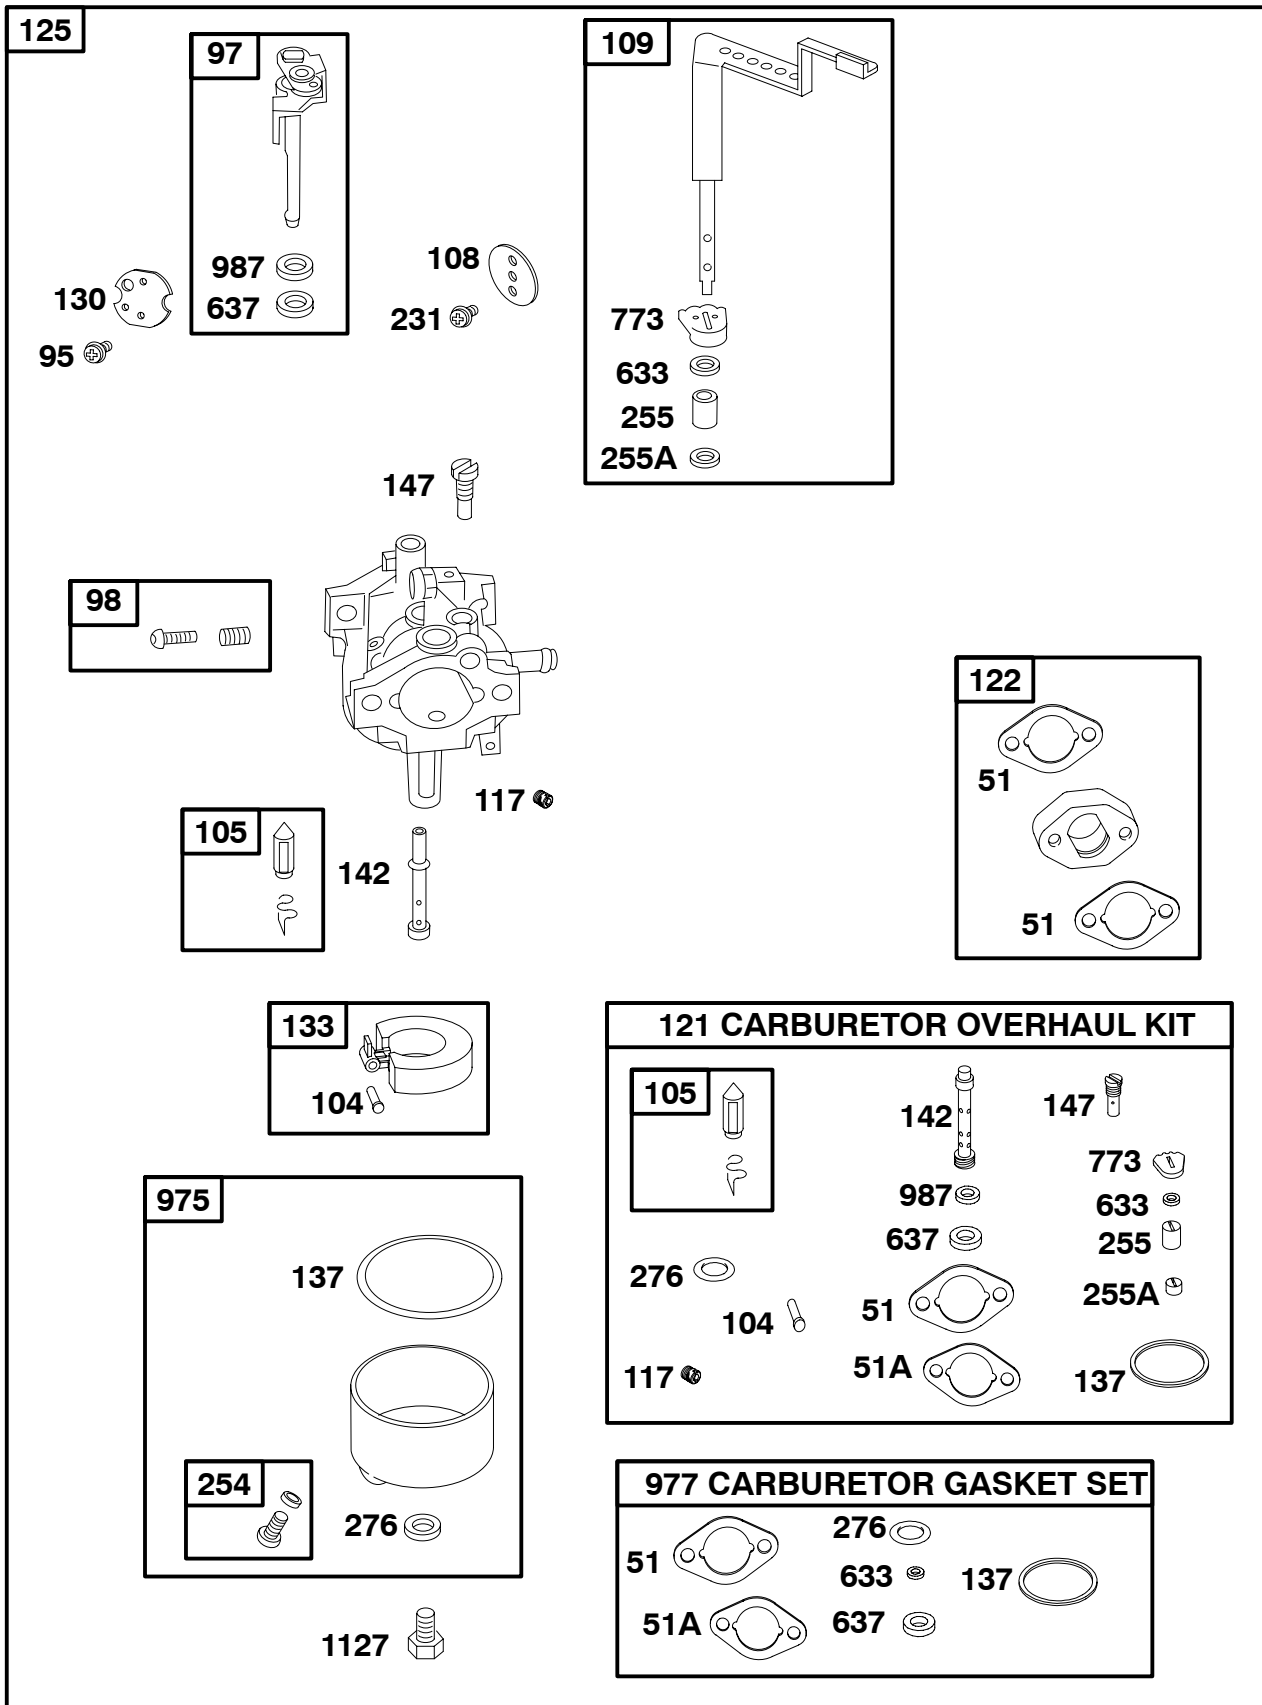


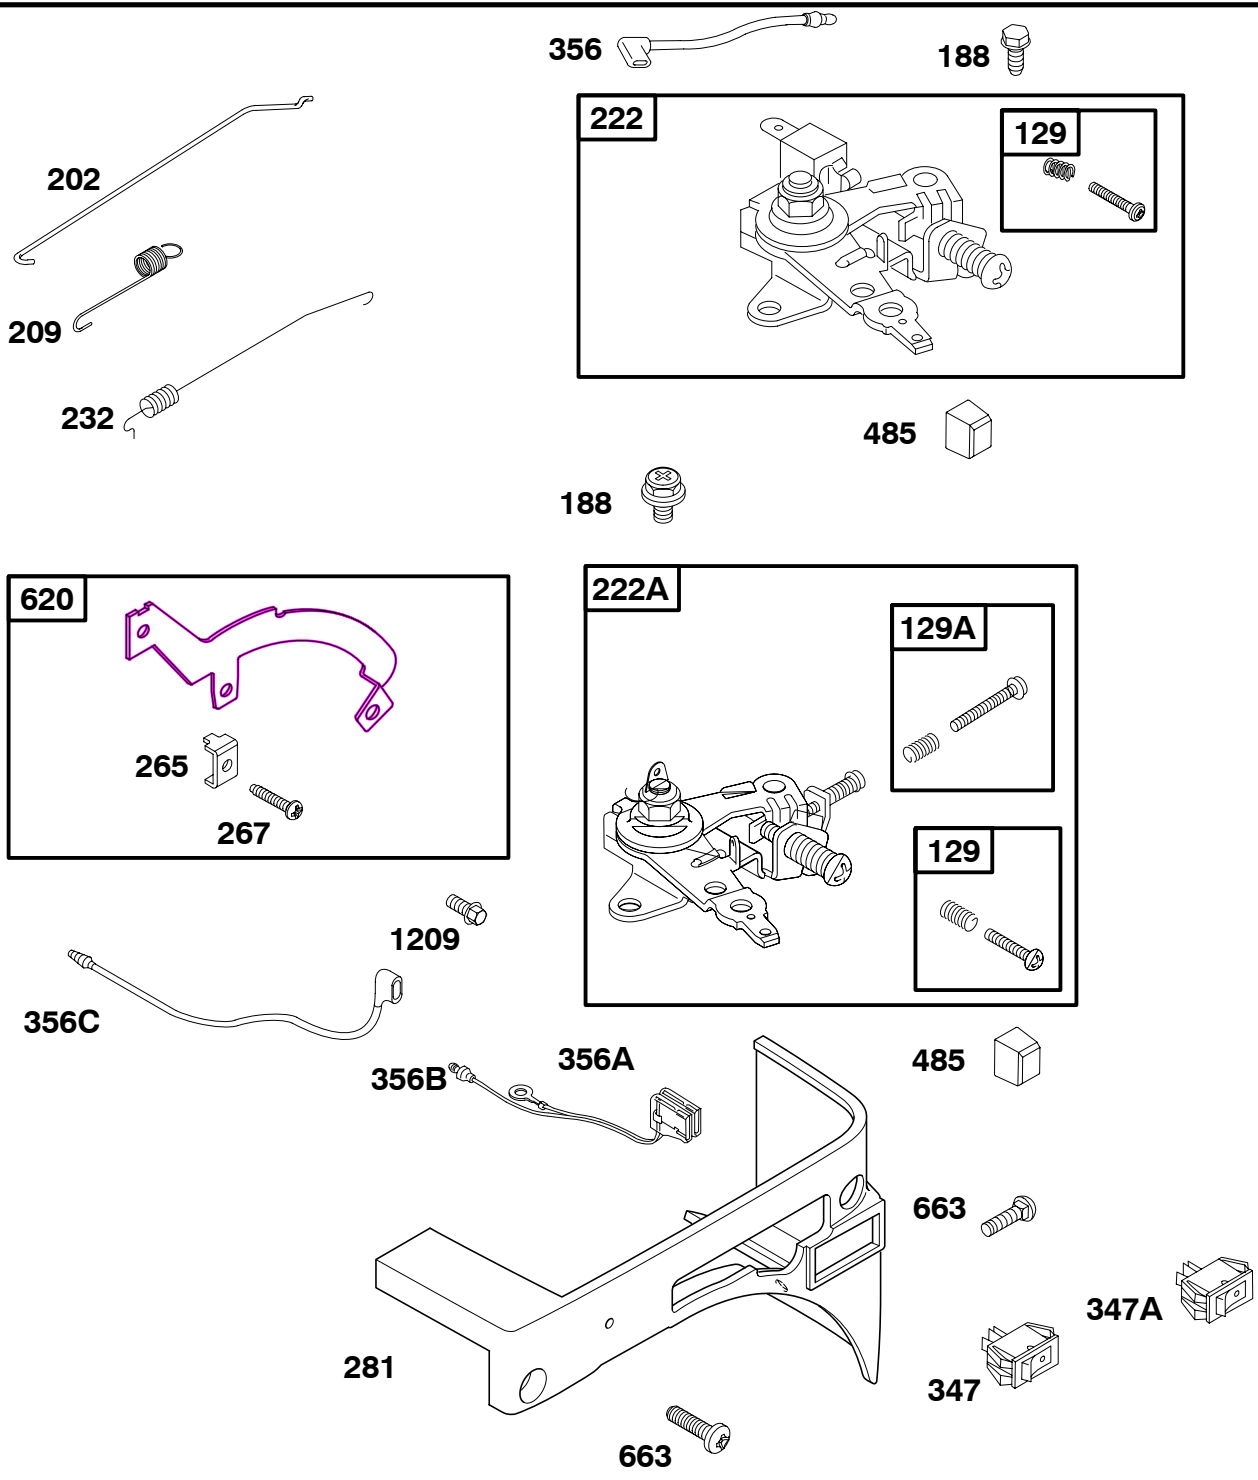







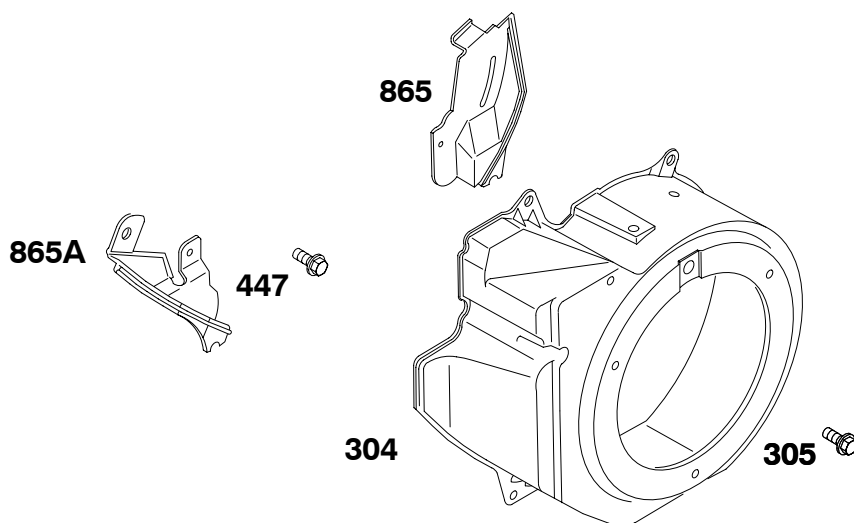


**1036 EMISSIONS LABEL**

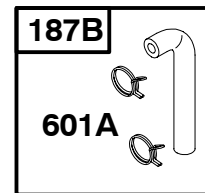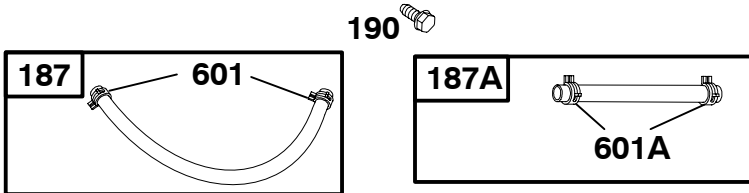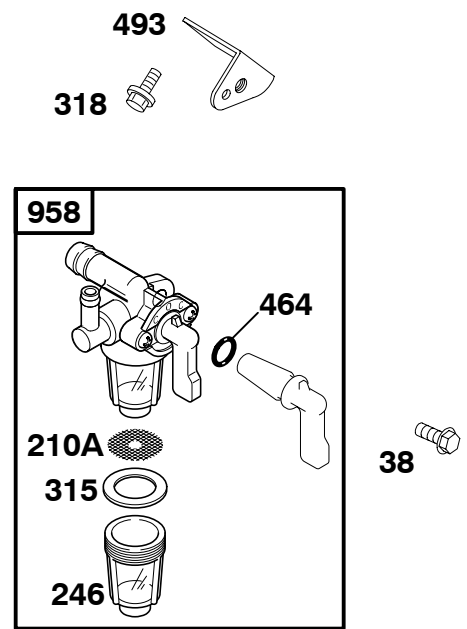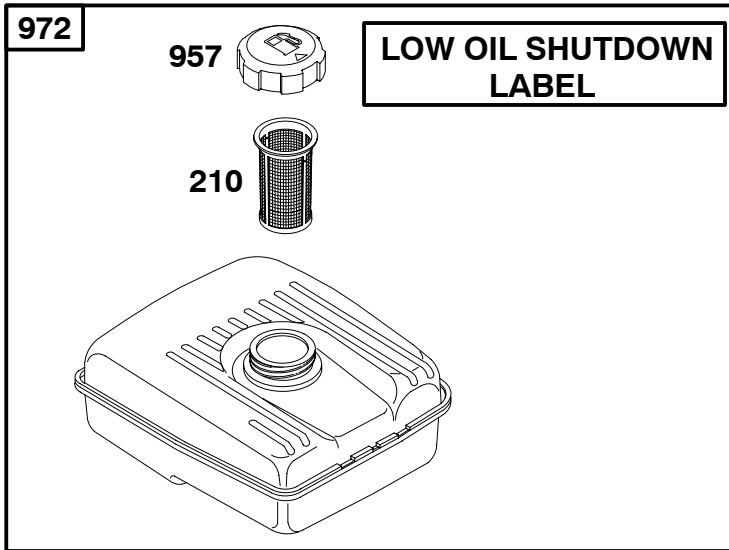

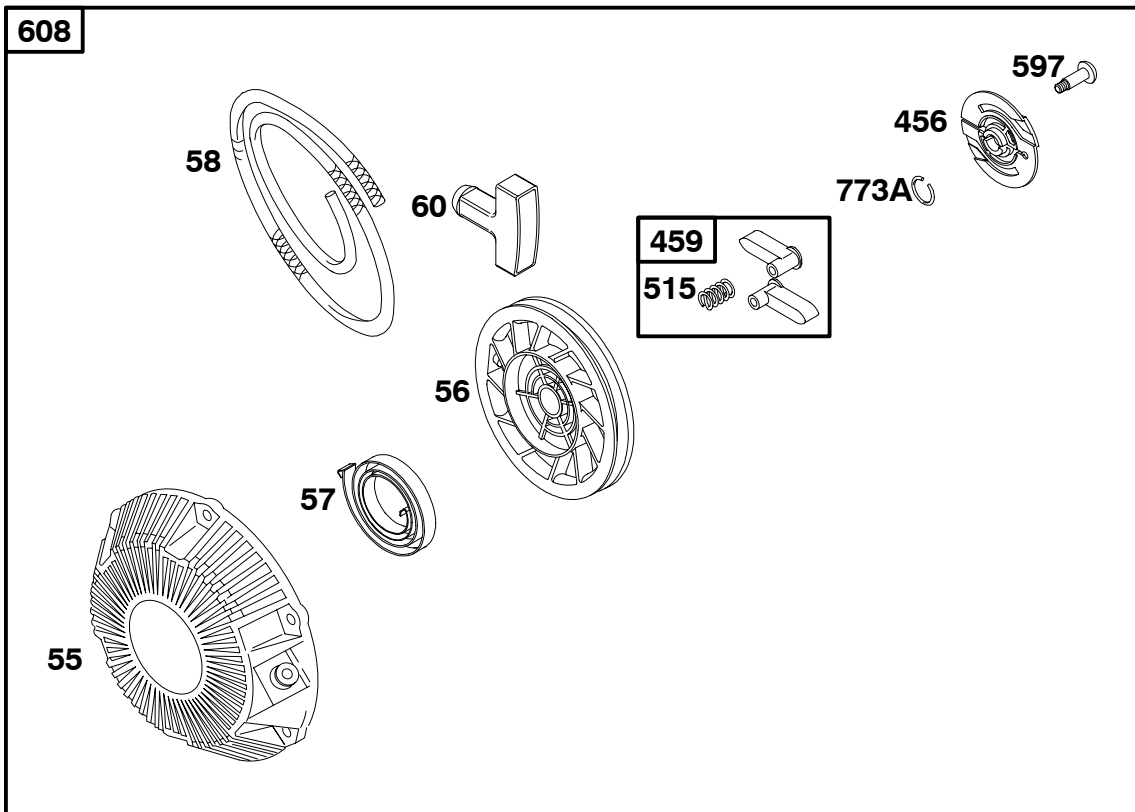

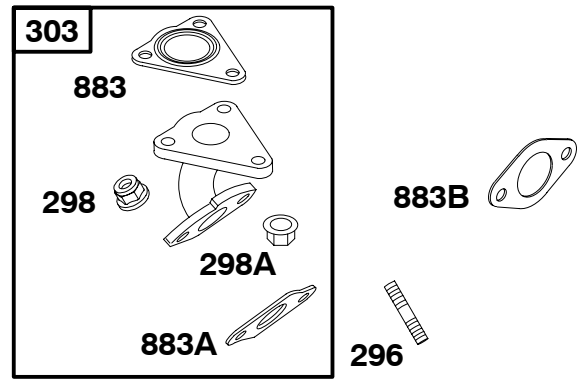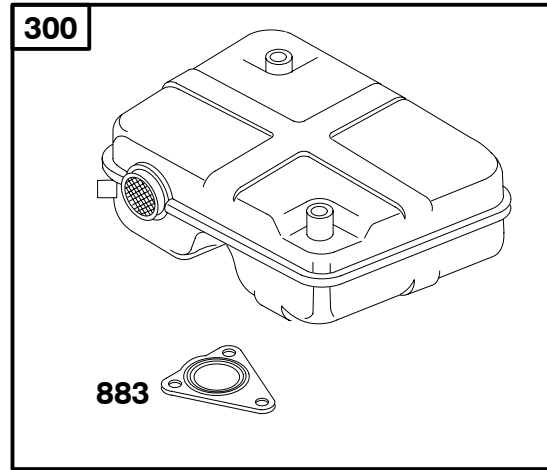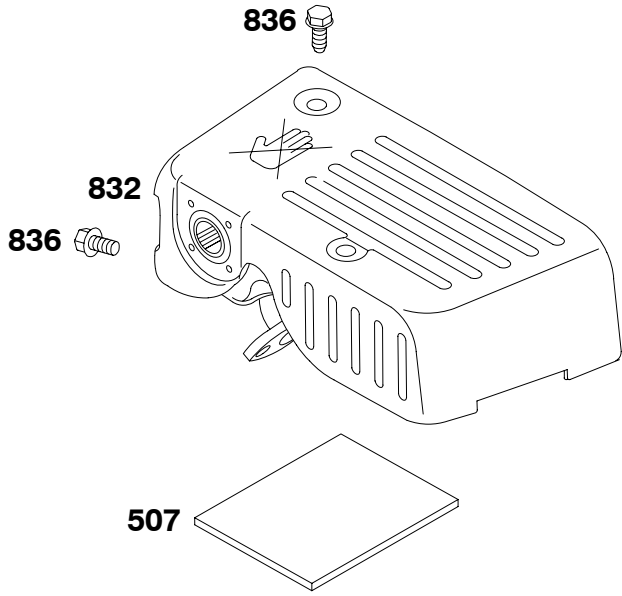

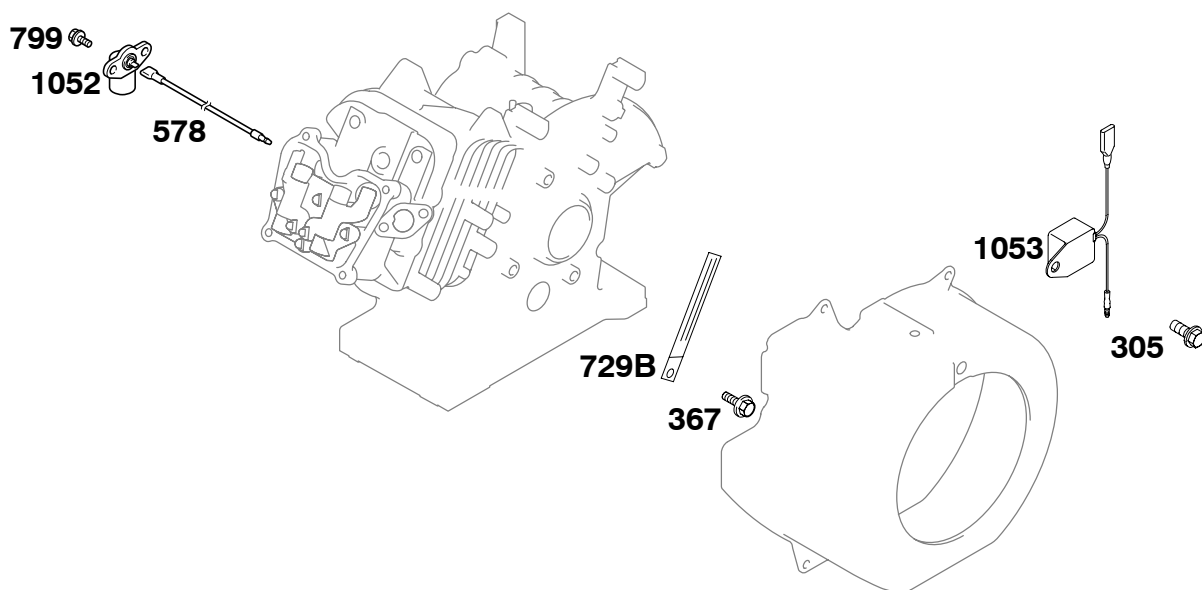

# 118400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
1	715810	Cylinder Assembly	23	711196	Flywheel	55	711227	Housing-Rewind Starter		
3	★711139	Seal-Oil (Magneto Side)			----- <b>Note</b> -----	56	711231	Pulley-Starter		
5	715812	Head-Cylinder			711440 Flywheel	57	711229	Spring-Rewind Starter		
7	★Δ711129	Gasket-Cylinder Head			Used on Type No(s). 0115.	58	711221	Rope-Starter (Cut To Required Length)		
11	710115	Tube-Breather (Cut To Required Length)	24	710037	Key-Flywheel	60	490652	Grip-Starter Rope		
12	★711174	Gasket-Crankcase	25	715850	Piston Assembly (Standard)	65	711222	Screw (Rewind Starter)		
13	710020	Screw (Cylinder Head)			----- <b>Note</b> -----	95	711311	Screw (Throttle Valve)		
15	715811	Plug-Oil Drain			715851 Piston Assembly (.010" Oversize)	97	716155	Shaft-Throttle		
16	711190	Crankshaft (SAE 3/4 Inch Keyway) Used on Type No(s). 0036, 0115, 0130.			715852 Piston Assembly (.020" Undersize)	98	715872	Kit-Idle Speed		
		----- <b>Note</b> -----	26	715016	Ring Set (Standard)	101	711193	Pin-Shaft		
		711331 Crankshaft (SAE Taper) Used on Type No(s). 0061, 0116, 0118, 0123.			----- <b>Note</b> -----	104	●710195	Pin-Float Hinge		
		711332 Crankshaft (SAE 5/8 Inch Thread) Used on Type No(s). 0125, 0127.			715017 Ring Set (.010" Oversize)	105	716099	Valve-Float Needle		
		711333 Crankshaft (SAE 3/4" Threaded) Used on Type No(s). 0124.	27	711172	Lock-Piston Pin	108	711313	Valve-Choke		
		715903 Crankshaft (SAE) Used on Type No(s). 0060.	28	715853	Pin-Piston	109	715873	Shaft-Choke		
		715906 Crankshaft (JIS Keyway) Used on Type No(s). 0120.	29	715847	Rod-Connecting (Standard)	117	●711323	Jet-Main (Standard)		
					----- <b>Note</b> -----	121	716024	Kit-Carburetor Overhaul		
					715849 Rod-Connecting (.020" Undersize)	122	715034	Spacer-Carburetor		
17	711140	Bearing-Ball	32	710041	Screw (Connecting Rod)	125	716154	Carburetor		
17A	711175	Bearing-Ball	33	715846	Valve-Exhaust	129	715854	Screw/Spring- Governor Speed Used on Type No(s). 0036, 0060, 0115, 0124, 0125.		
18	715842	Cover-Crankcase	34	715845	Valve-Intake			----- <b>Note</b> -----		
		----- <b>Note</b> -----	35	711087	Spring-Valve (Intake)			715941 Screw/Spring- Governor Speed Used on Type No(s). 0061, 0116, 0118, 0123.		
		711254 Cover-Crankcase Used on Type No(s). 0120.	36	711087	Spring-Valve (Exhaust)	129A	716094	Screw/Spring- Governor Speed		
20	★710031	Seal-Oil (PTO Side)	38	710057	Screw (Shut Off Valve)	130	711312	Valve-Throttle		
22	710032	Screw (Crankcase Cover/Sump)	40	711086	Retainer-Valve	133	715079	Float-Carburetor		
			45	711173	Tappet-Valve	137	●●711318	Gasket-Float Bowl		
			46	716152	Camshaft (Spur Gear With Compression Release)	142	●711322	Nozzle-Carburetor (Standard)		
			51★Δ●●710060	Gasket-Intake				146	710037	Key-Timing
			51A★Δ●●710639	Gasket-Intake				147	●711315	Jet-Pilot
			53	710148	Stud (Carburetor)	161	711198	Base-Air Cleaner (Metal)		

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Δ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION			
187	716126	Line-Fuel (8mm Inside Diameter)(Cut To Required Length)	221	710027	Cup-Governor	298	710090	Locknut-Muffler/Elbow			
187A	716121	Line-Fuel (4mm Inside Diameter)(Cut to Required Length)	222	715855	Bracket-Control Used on Type No(s). 0036, 0060, 0115, 0124, 0125.	298A	710068	Locknut-Muffler/Elbow			
187B	716120	Line-Fuel (4mm Inside Diameter)(Molded)(Cut to Required Length)			----- <b>Note</b> -----	300	711239	Muffler			
188	711209	Screw (Control Bracket)			715904	303	715861	Elbow-Exhaust			
190	711216	Screw (Fuel Tank)			Bracket-Control Used on Type No(s). 0061, 0116, 0118, 0123.	304	711210	Housing-Blower			
192	715841	Adjuster-Rocker Arm	222A	715905	Bracket-Control Used on Type No(s). 0120, 0127, 0128, 0130, 0139, 0140, 0143, 0144.	305	710023	Screw (Blower Housing)			
202	711206	Link-Mechanical Governor			225	710028	Shaft-Governor Gear	306	711211	Shield-Cylinder	
209	711250	Spring-Governor Used on Type No(s). 0036, 0060, 0115.			227	711205	Lever-Governor Control	307	710023	Screw (Cylinder Shield)	
		----- <b>Note</b> -----			231	711314	Screw (Choke Valve)	315	★710072	Seal-O Ring (Filter Bowl)	
		711434 Spring-Governor Used on Type No(s). 0061, 0116, 0118, 0123, 0132, 0137.			232	711207	Spring-Governor Link	318	710074	Screw (Mounting Bracket)	
		711436 Spring-Governor Used on Type No(s). 0124, 0125.			235	710522	Shield-Fuel Spray	332	710048	Nut (Flywheel)	
		711437 Spring-Governor Used on Type No(s). 0127.			240	298090s	Filter-Fuel Used on Type No(s). 0061.	333	711197	Armature-Magneto	
		711438 Spring-Governor Used on Type No(s). 0120, 0128, 0130, 0131, 0140, 0143, 0144, 0145, 0150, 0151, 0152, 0159.			246	710070	Bowl-Fuel Filter	334	711142	Screw (Magneto Armature)	
210	710065	Strainer-Fuel			254	716203	Drain-Carburetor Bowl	337	711252	Plug-Spark	
210A	710071	Strainer-Fuel			255	●710177	Bushing-Choke Shaft	347	691995	Switch-Rocker Used on Type No(s). 0061, 0116, 0120, 0123, 0127, 0130.	
219	715679	Gear-Governor	255A	●710179	Bushing-Choke Shaft	265	711682	Clamp-Casing	347A	711439	Switch-Rocker Used on Type No(s). 0118.
220	710545	Washer (Governor Gear)	276	◆711319	Washer-Sealing	278	710058	Washer (Governor Control Lever)	356	711203	Wire-Stop
			281	711248	Panel-Control Used on Type No(s). 0036, 0060, 0115, 0118, 0124, 0125.			----- <b>Note</b> -----	356A	710324	Wire-Stop
					----- <b>Note</b> -----			711433 Panel-Control Used on Type No(s). 0061, 0116, 0120, 0123, 0127, 0130.	356B	710087	Wire-Stop Used on Type No(s). 0061, 0116, 0120, 0123, 0127, 0130.
			296	710099	Stud (Muffler)			710120 Wire-Stop Used on Type No(s). 0061, 0116, 0120, 0123, 0127, 0130.	356C	710120	Wire-Stop Used on Type No(s). 0061, 0116, 0120, 0123, 0127, 0130.
								358	715875	Gasket Set-Engine	
								367	711427	Screw (Wire Clip)	
								383	19374s	Wrench-Spark Plug	
								425	694515	Screw (Air Cleaner Cover)	

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

# 118400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
445	491588s	Filter–Air Cleaner Cartridge	635	710634	Boot–Spark Plug	914	710057	Screw (Rocker Cover)
447	710023	Screw (Air Guide Cover)	637	◆	Washer (Throttle Shaft)(Sold In Kit Only)	957	711215	Cap–Fuel Tank (Plastic)
455	711237	Cup–Flywheel	654	710068	Nut (Carburetor)	958	715901	Valve–Fuel Shut Off (Plastic)
456	711233	Plate–Pawl Friction	663	711249	Screw (Control Panel)	967	491435s	Filter–Pre Cleaner
459	715860	Pawl–Ratchet	691	★710055	Seal–Governor Shaft	968	692321	Cover–Air Cleaner
464	★710069	Seal–O Ring (Fuel Shut–off Valve)	718	710005	Pin–Locating	972	715856	Tank–Fuel (Plastic)
474	715255	Alternator Used on Type No(s). 0115.	725	711251	Shield–Heat	975	716202	Bowl–Float
485	692295	Knob–Control	728	710023	Screw (Heat Shield)	977	715876	Gasket Set–Carburetor
493	711219	Bracket–Mounting	729A	710046	Clip–Wire	987	◆711324	Seal–Throttle Shaft
505	711208	Nut (Governor Control Lever)	729B	710407	Clip–Wire	1005	711170	Fan–Flywheel
507	711243	Insulator	741	711191	Gear–Timing (Spur Gear)	1022	★△711112	Gasket–Rocker Cover
515	691528	Spring–Pawl	773	◆710175	Retainer	1023	715840	Cover–Rocker
521	711171	Shield–Cable	773A	711225	Retainer	1026	711176	Rod–Push
523	715588	Dipstick	798	710234	Screw (Rocker Arm)	1029	715814	Arm–Rocker
578	711247	Wire Assembly (Oil Sensor)	799	710057	Screw (Oil Sensor)	1036		Label–Emissions (Available from an Authorized Briggs & Stratton Service Dealer)
597	711235	Screw (Pawl Friction Plate)	832	711241	Guard–Muffler	1051	710548	Ring–Retaining
601	710067	Clamp–Hose	836	710074	Screw (Muffler Guard)	1052	711246	Sensor–Oil
601A	710075	Clamp–Hose	842	★710029	Seal–O Ring (Dipstick Tube)	1053	710305	Module–Oil Gard
608	715859	Starter–Rewind	865	711212	Cover–Air Guide (Opposite Cylinder Head Side)	1058	MS6669	Operator’s Manual
614	710056	Pin–Cotter	865A	711213	Cover–Air Guide (Cylinder Head Side)	1095	715877	Gasket Set–Valve
616	711204	Crank–Governor	868	△711287	Seal–Valve	1119	710047	Screw (Alternator) Used on Type No(s). 0115.
620	716026	Panel–Speed Control Used on Type No(s). 0131, 0144, 0150, 0151, 0152.	883	★△711245	Gasket–Exhaust	1127	711320	Screw (Float Bowl)
631	★711188	Washer (Oil Drain Plug)	883A	★△711244	Gasket–Exhaust	1209	710234	Screw (Speed Control Panel)
633	◆	Seal–Choke/Throttle Shaft (Sold In Kit Only)	883B	710082	Gasket–Exhaust Used on Type No(s). 0061, 0116.	1241	711084	Plate–Valve Spring

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**