



350400

Illustrated Parts List

Model Series

350400

TYPE NUMBERS
0001 through 1421.

TABLE OF CONTENTS


Air Cleaners	7
Alternator	14
Blower Housing	11
Camshaft	2
Carburetor	6
Controls	10
Crankcase Cover	4
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	15 & 16
Exhaust System	8
Flywheel	12
Fuel Supply	9
Gasket Set - Engine	2
Gasket Set - Valve	3
Governor Spring	10
Ignition	14
Intake Manifold	4
Kit - Carburetor Overhaul	6
Lubrication	5
Piston, Rings, Connecting Rod	2
Rewind Starter	13
Shrouds	11
Valves	3


PRINTED IN U.S.A.



BRIGGS & STRATTON





COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

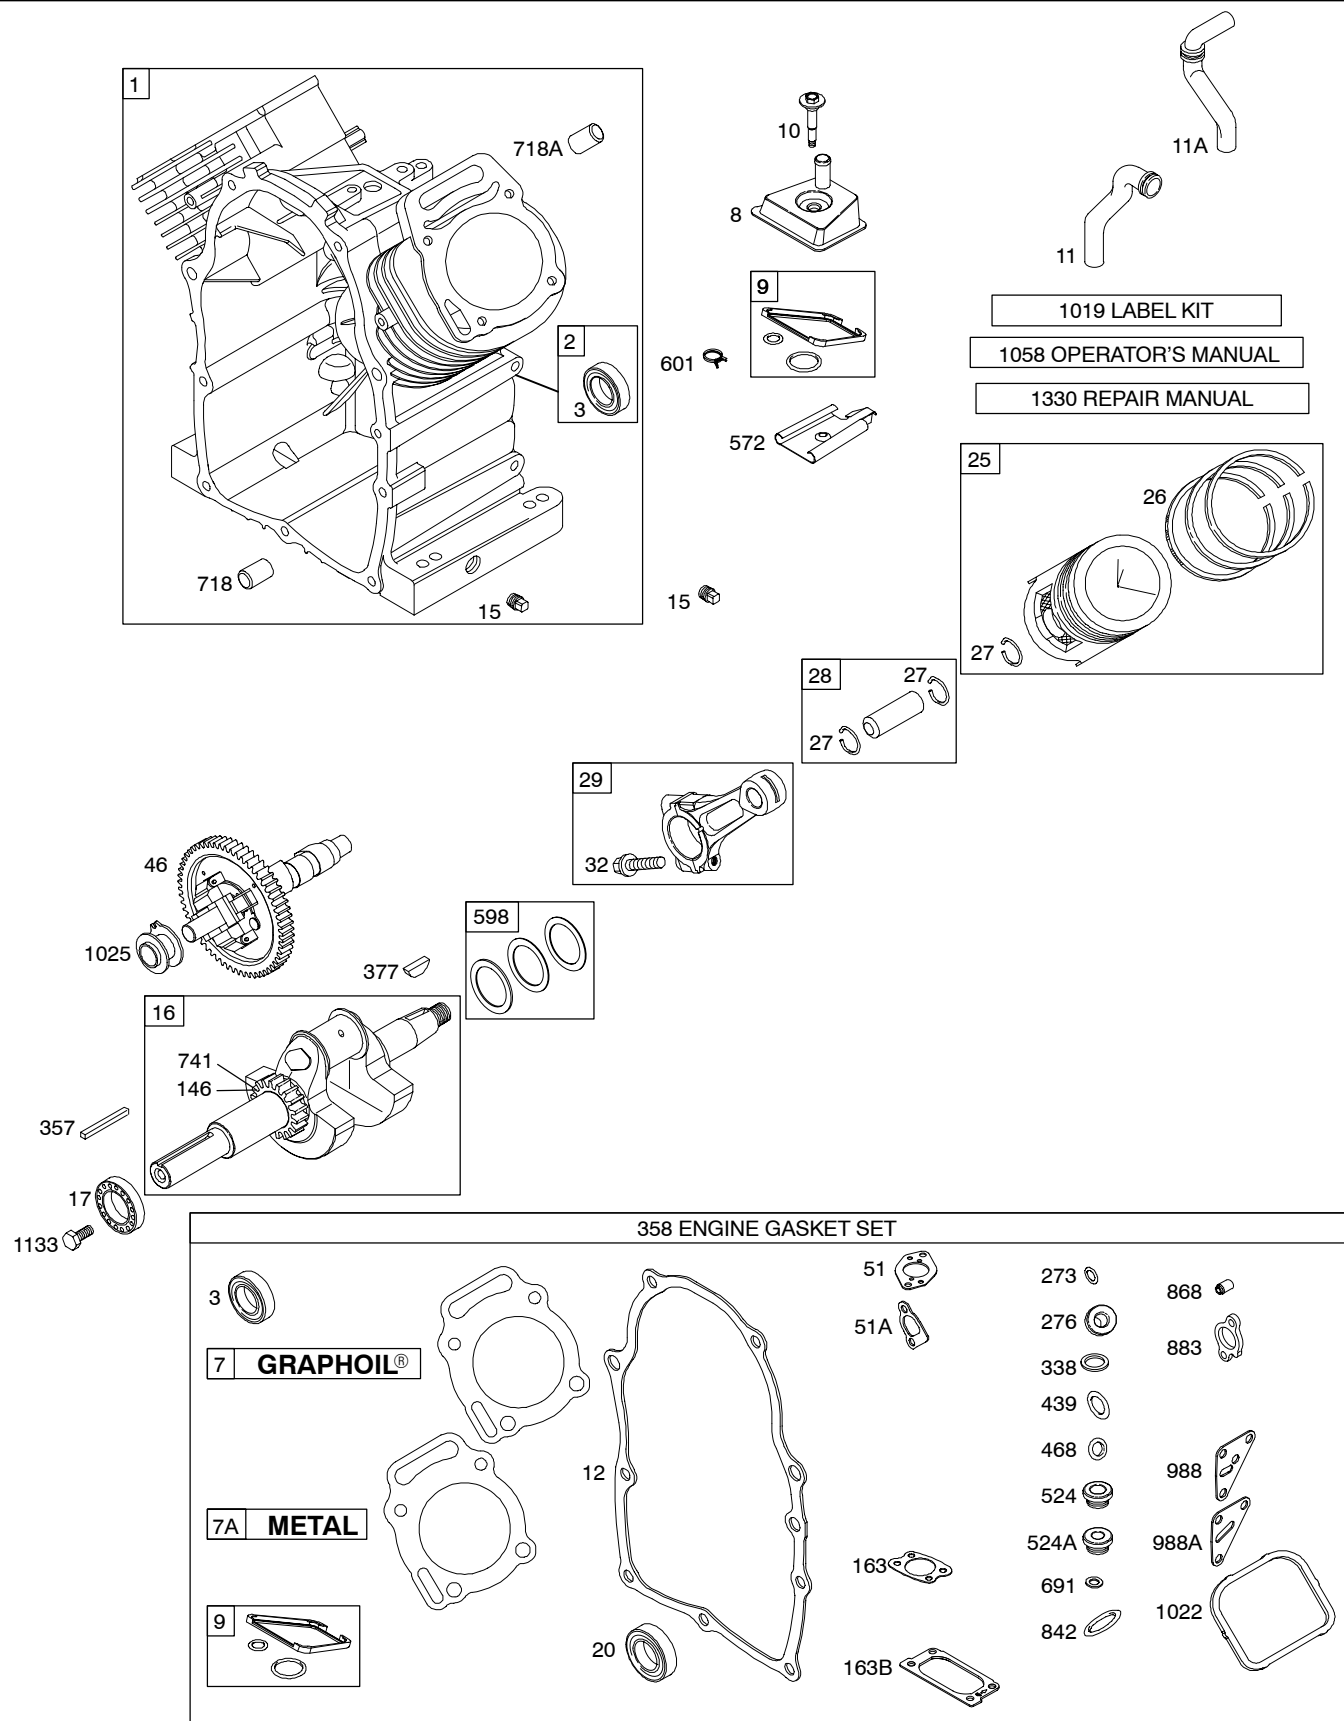

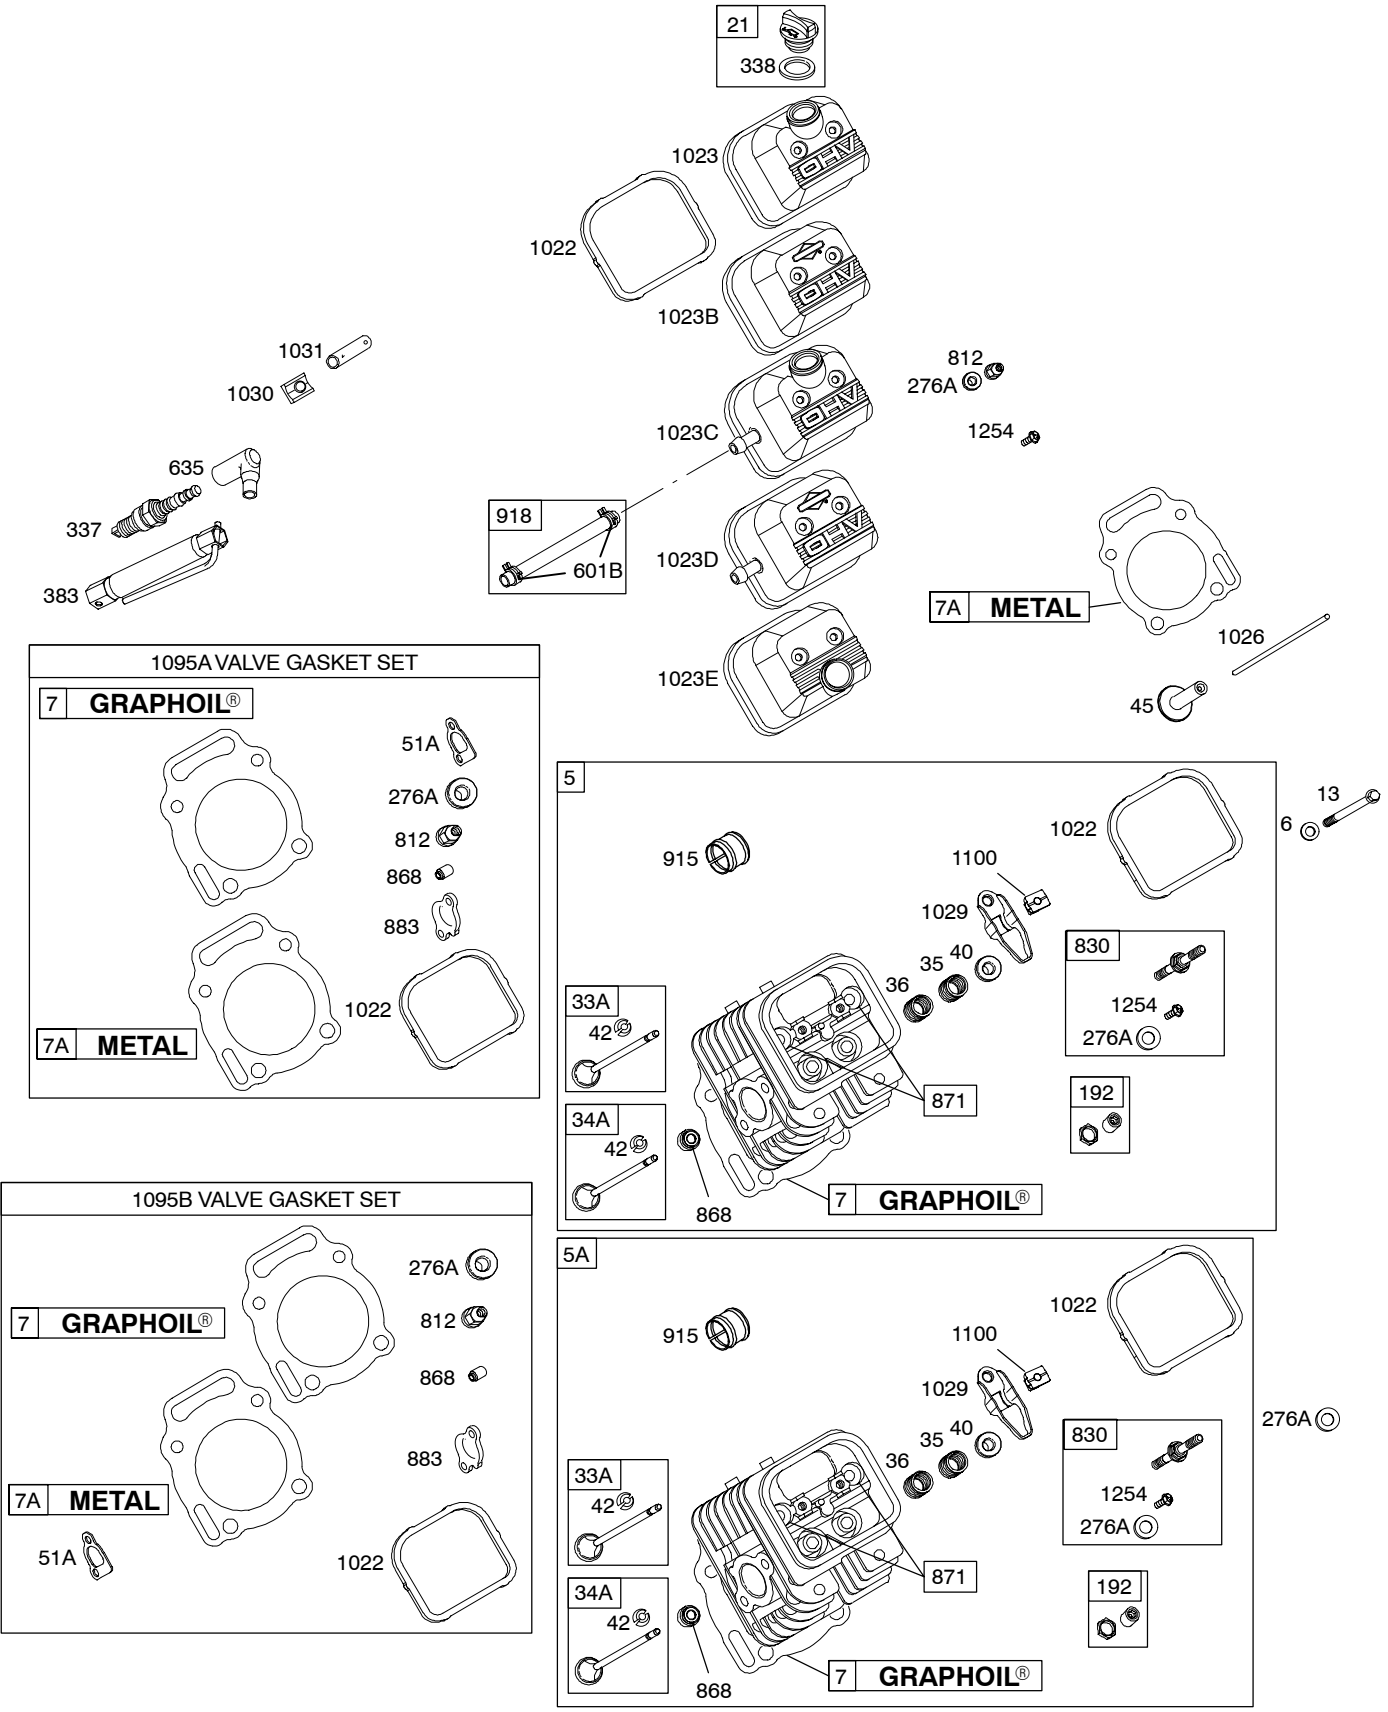


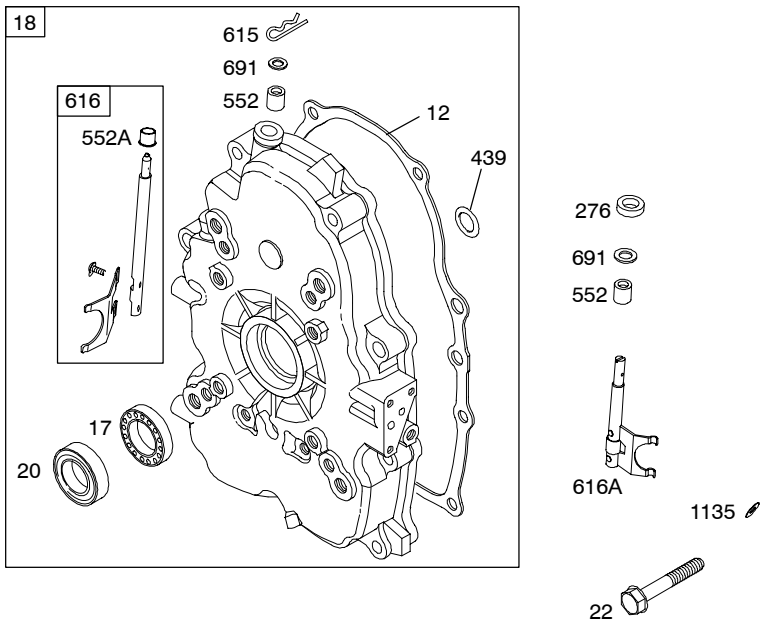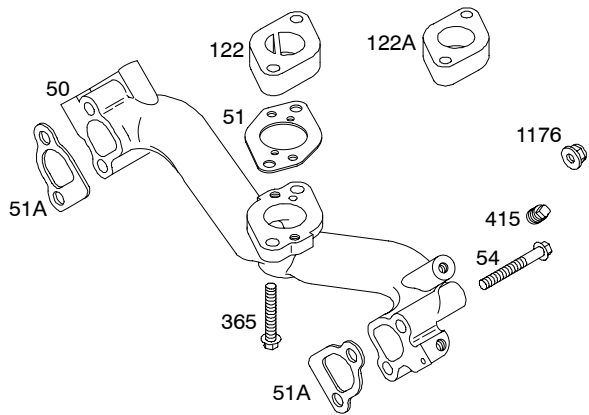


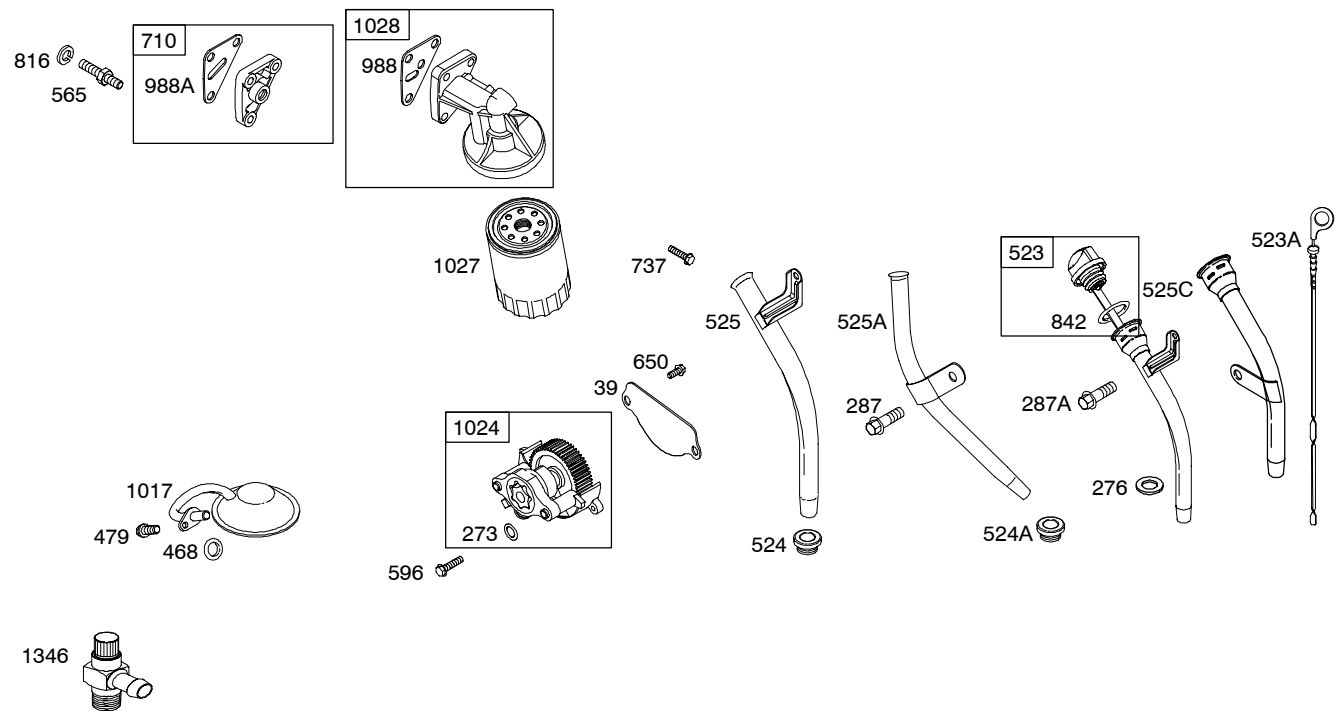






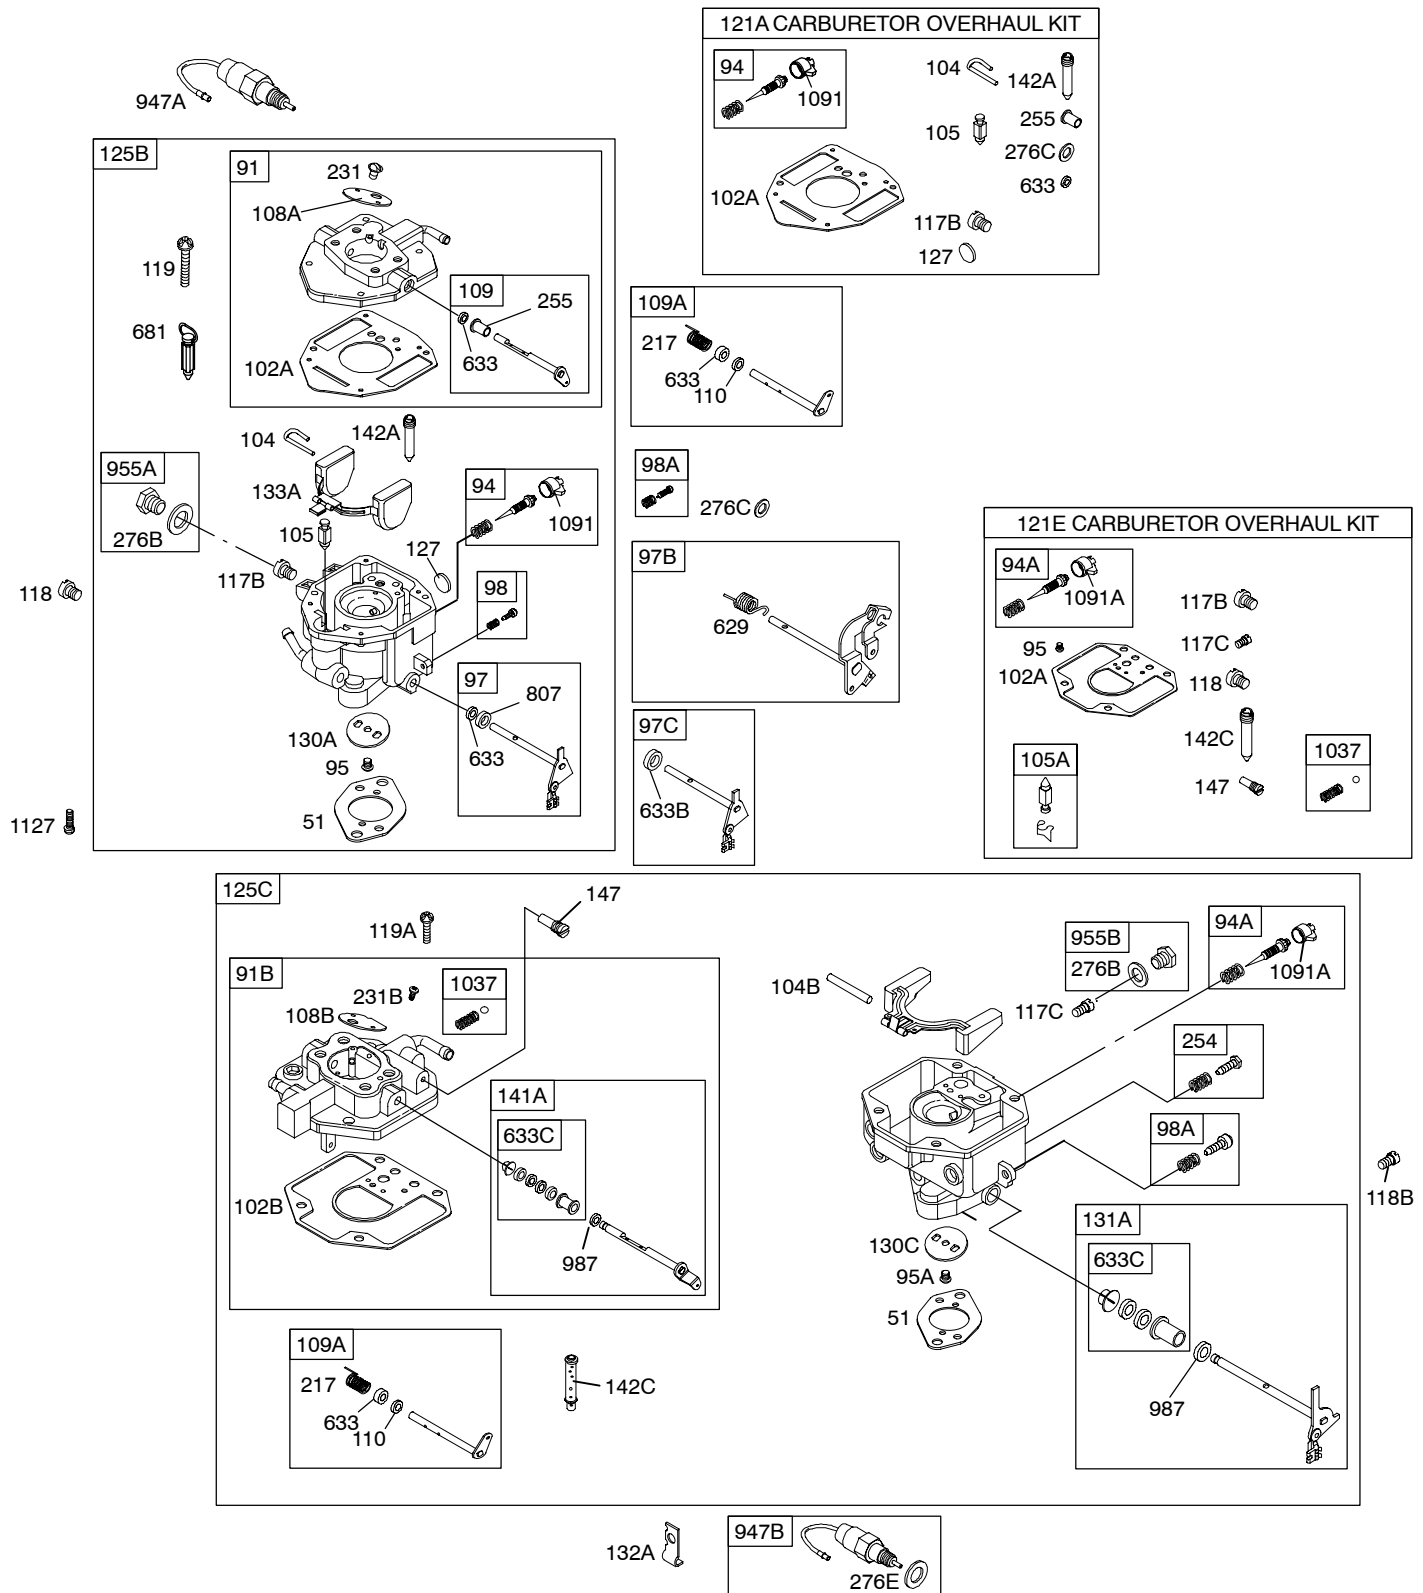





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


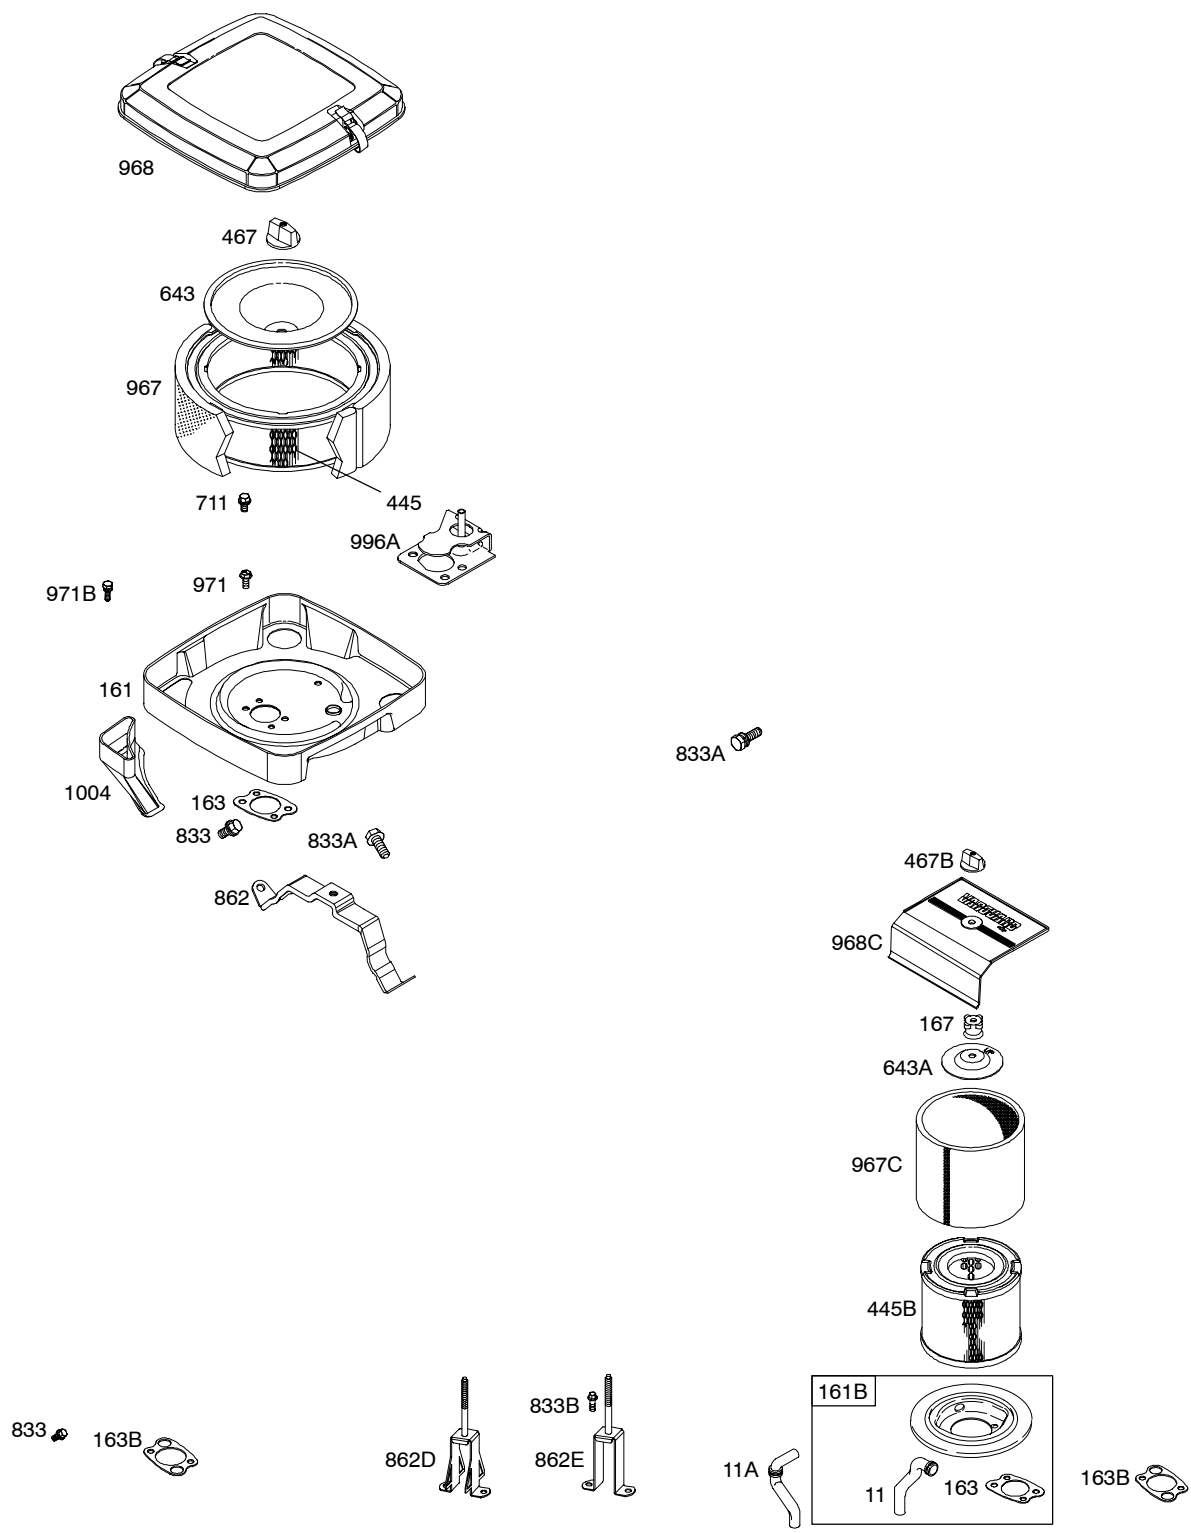


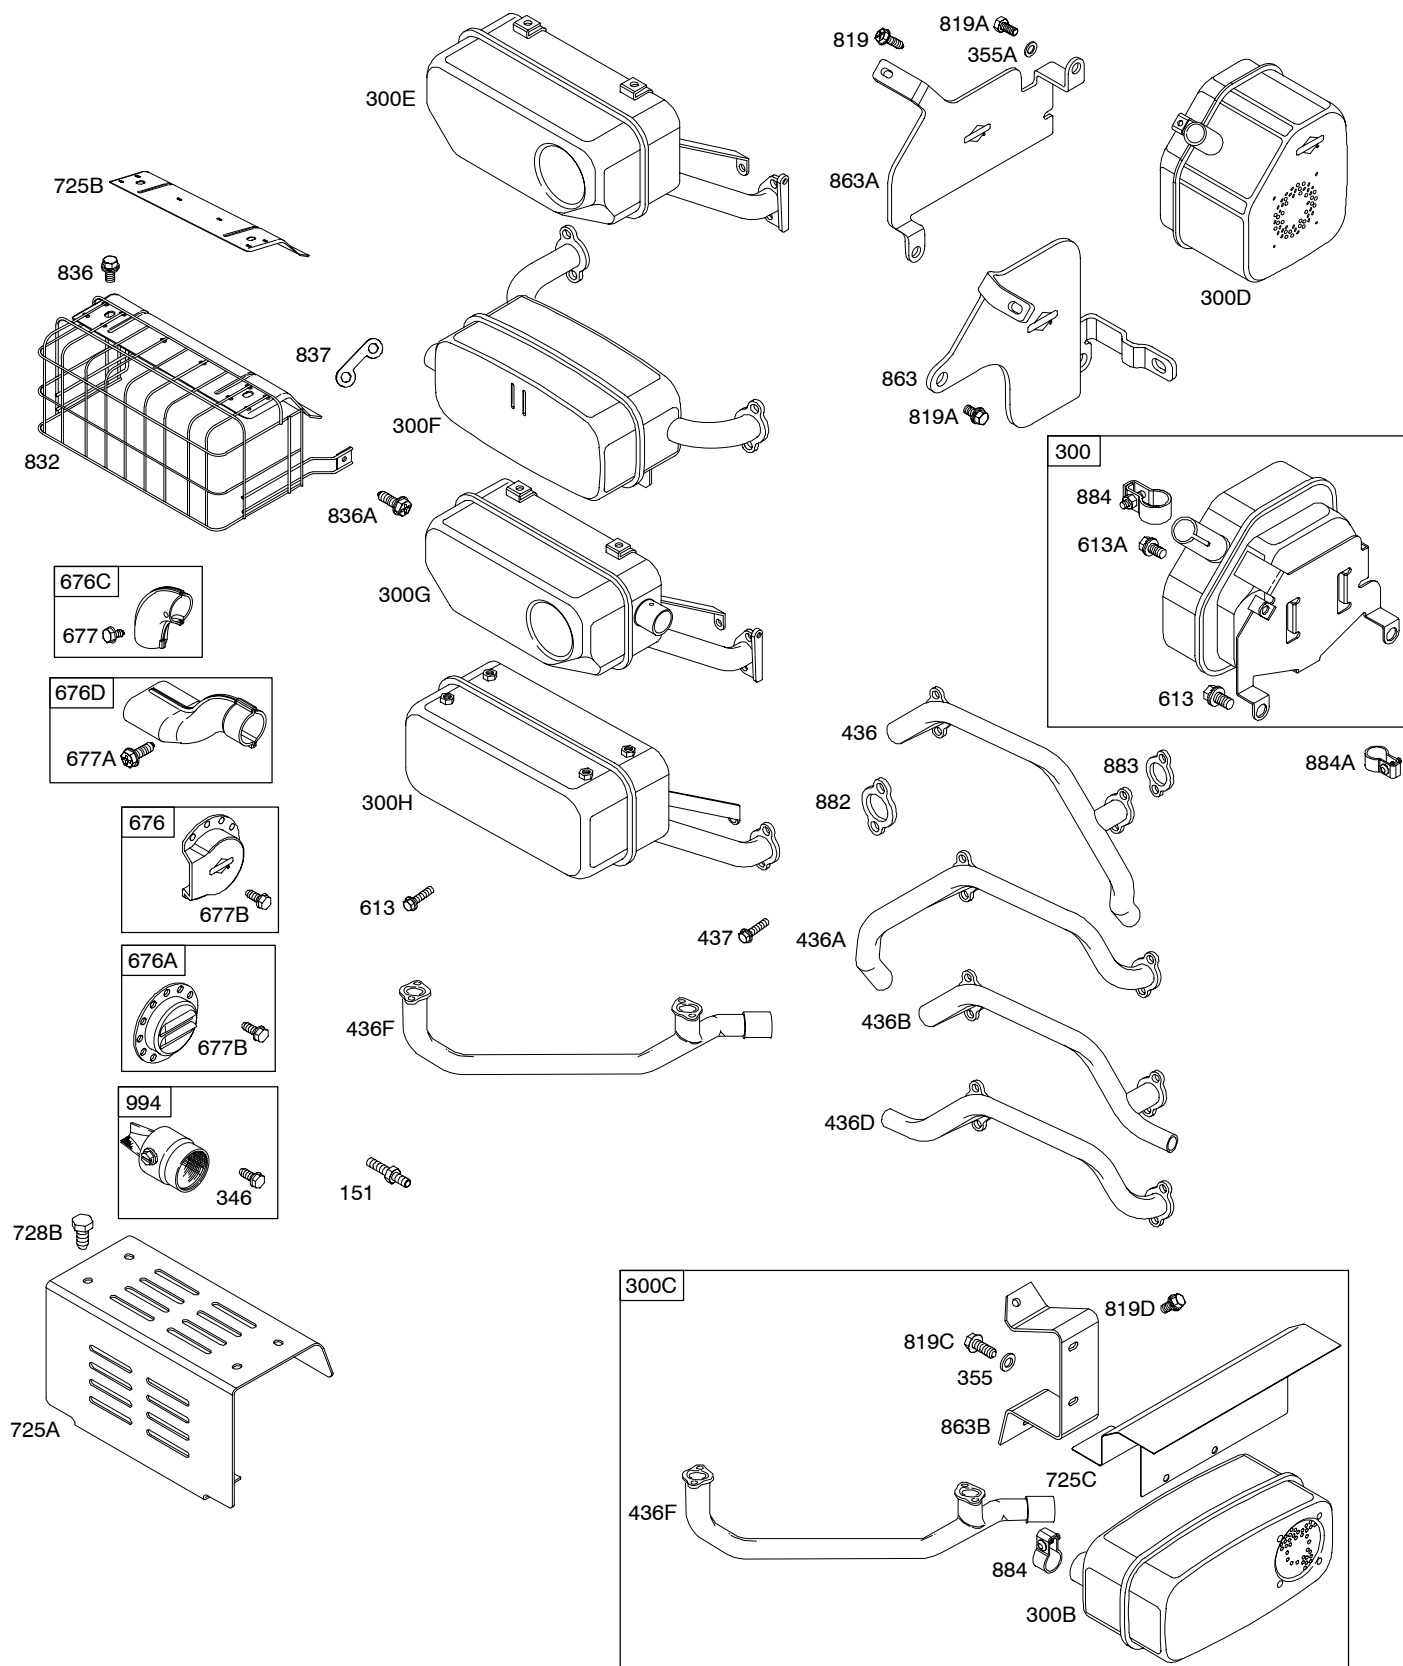





Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.


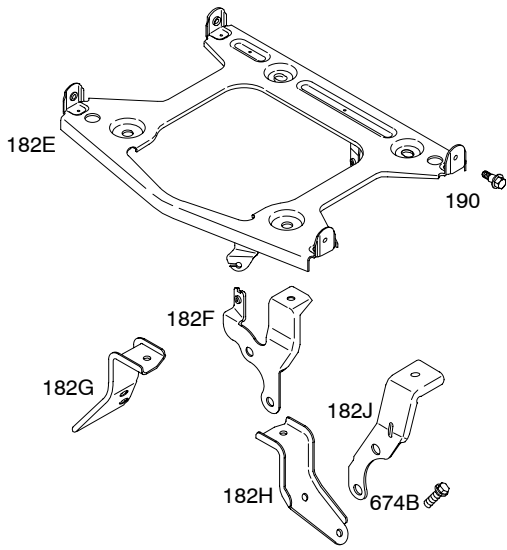

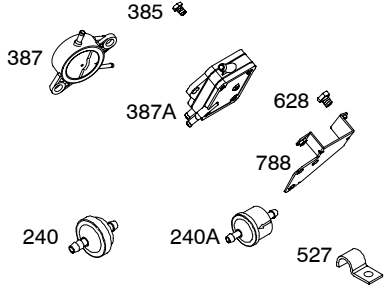
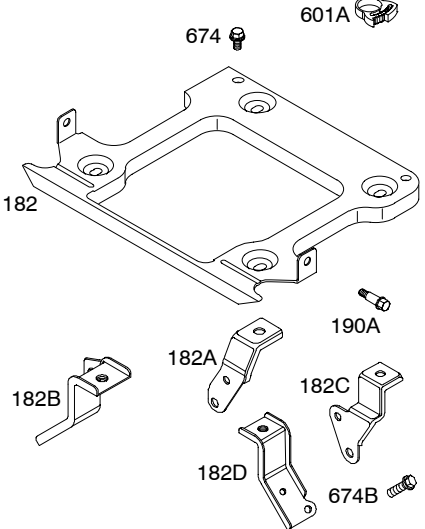
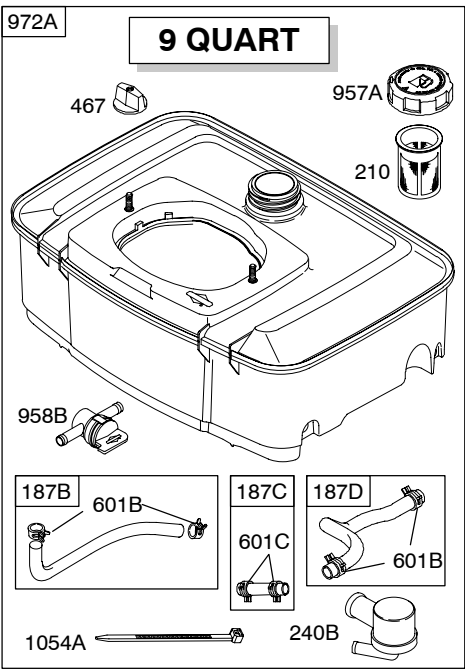
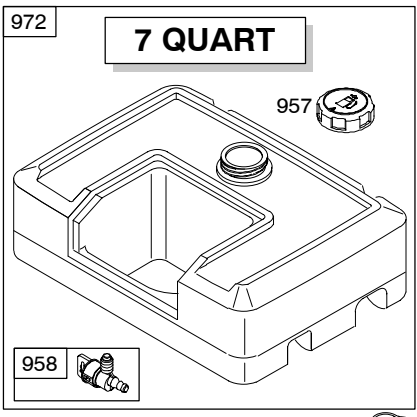


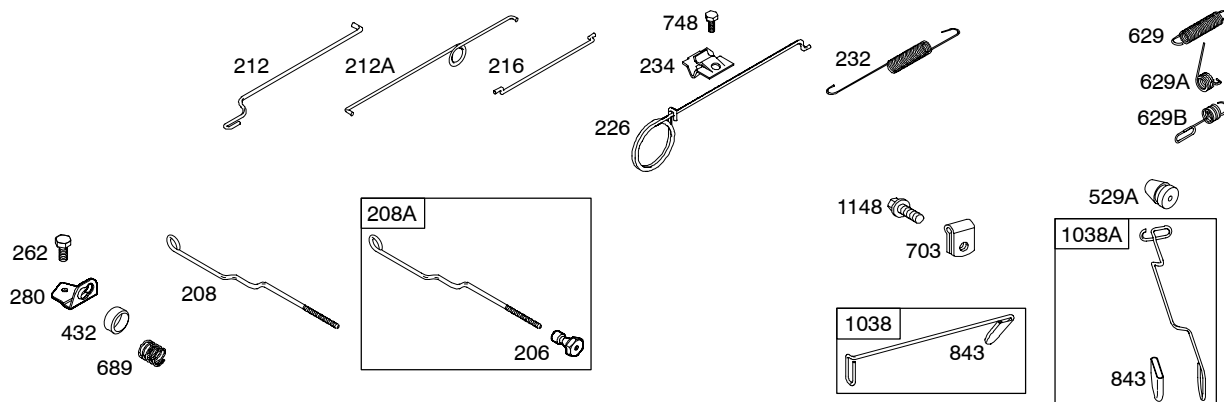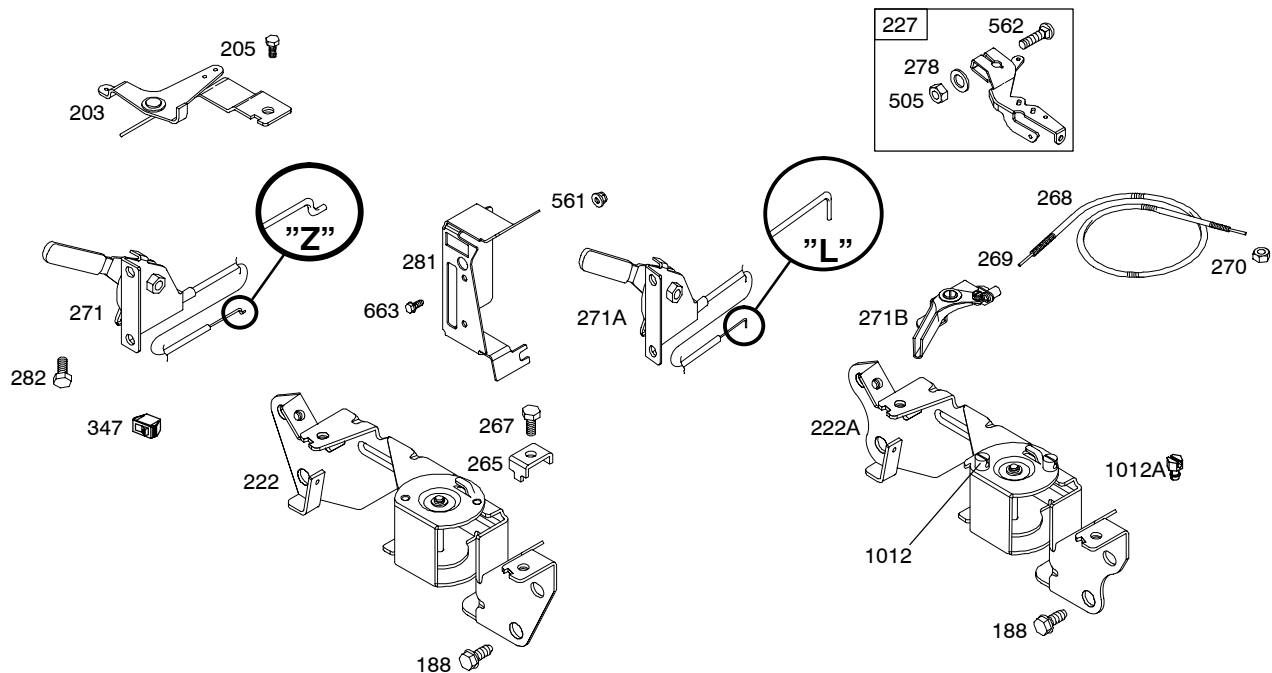



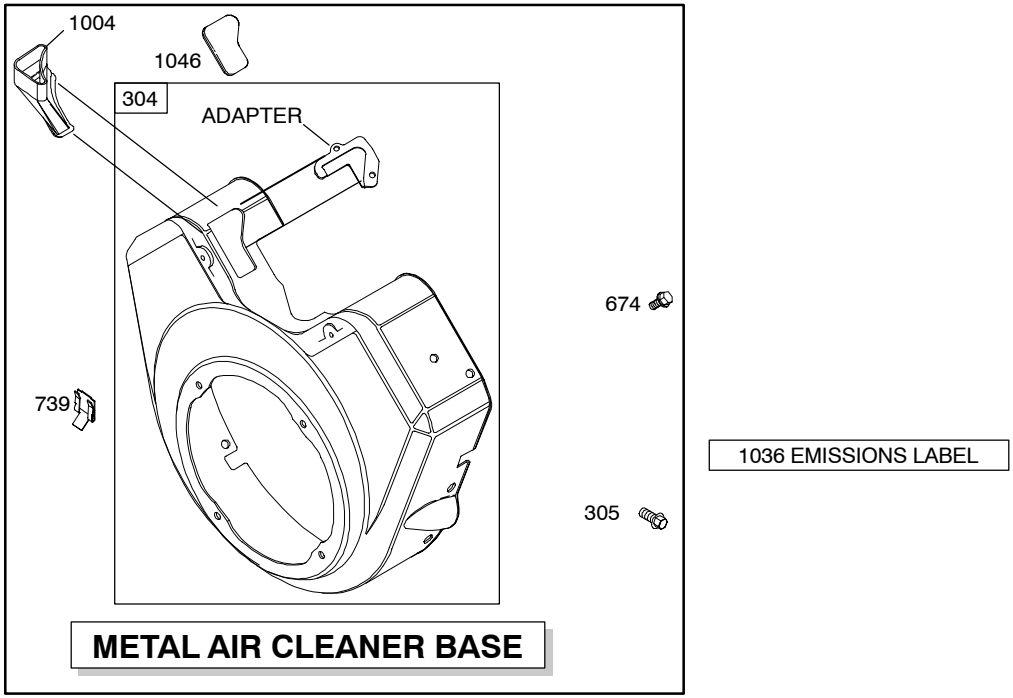
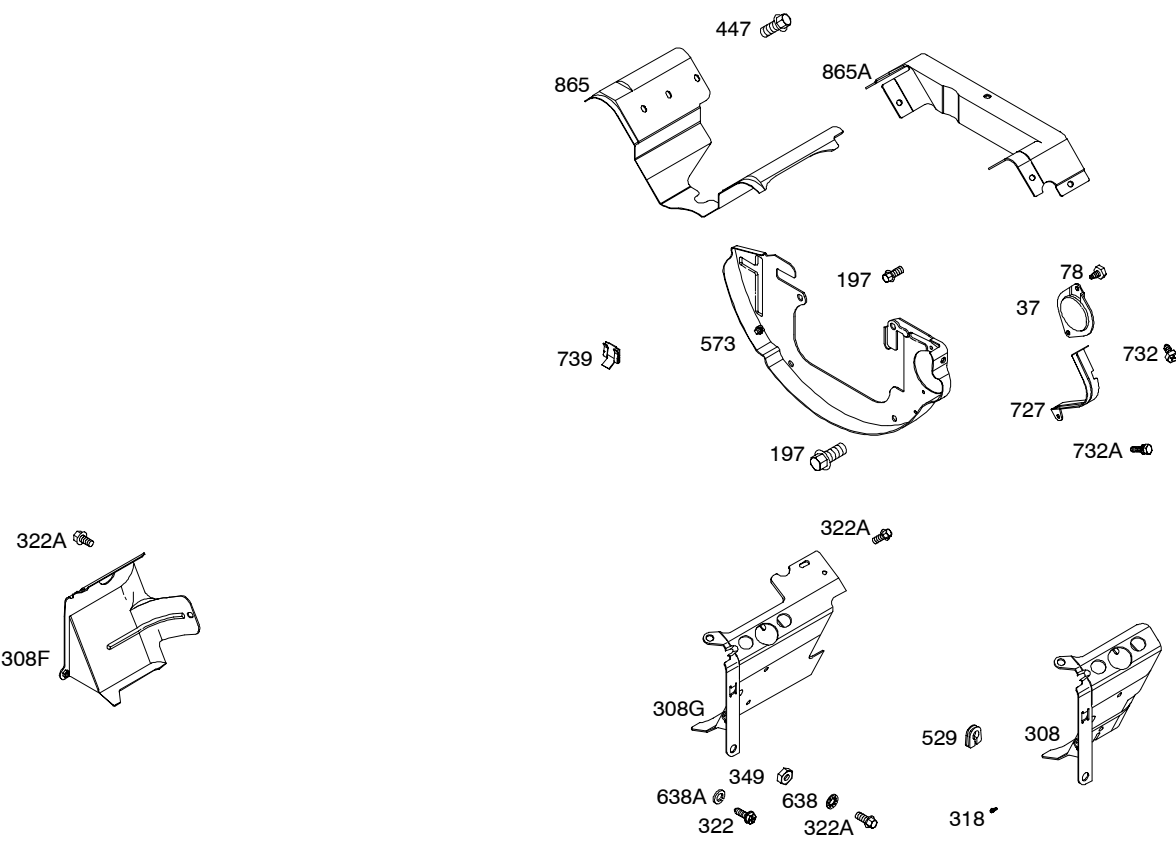



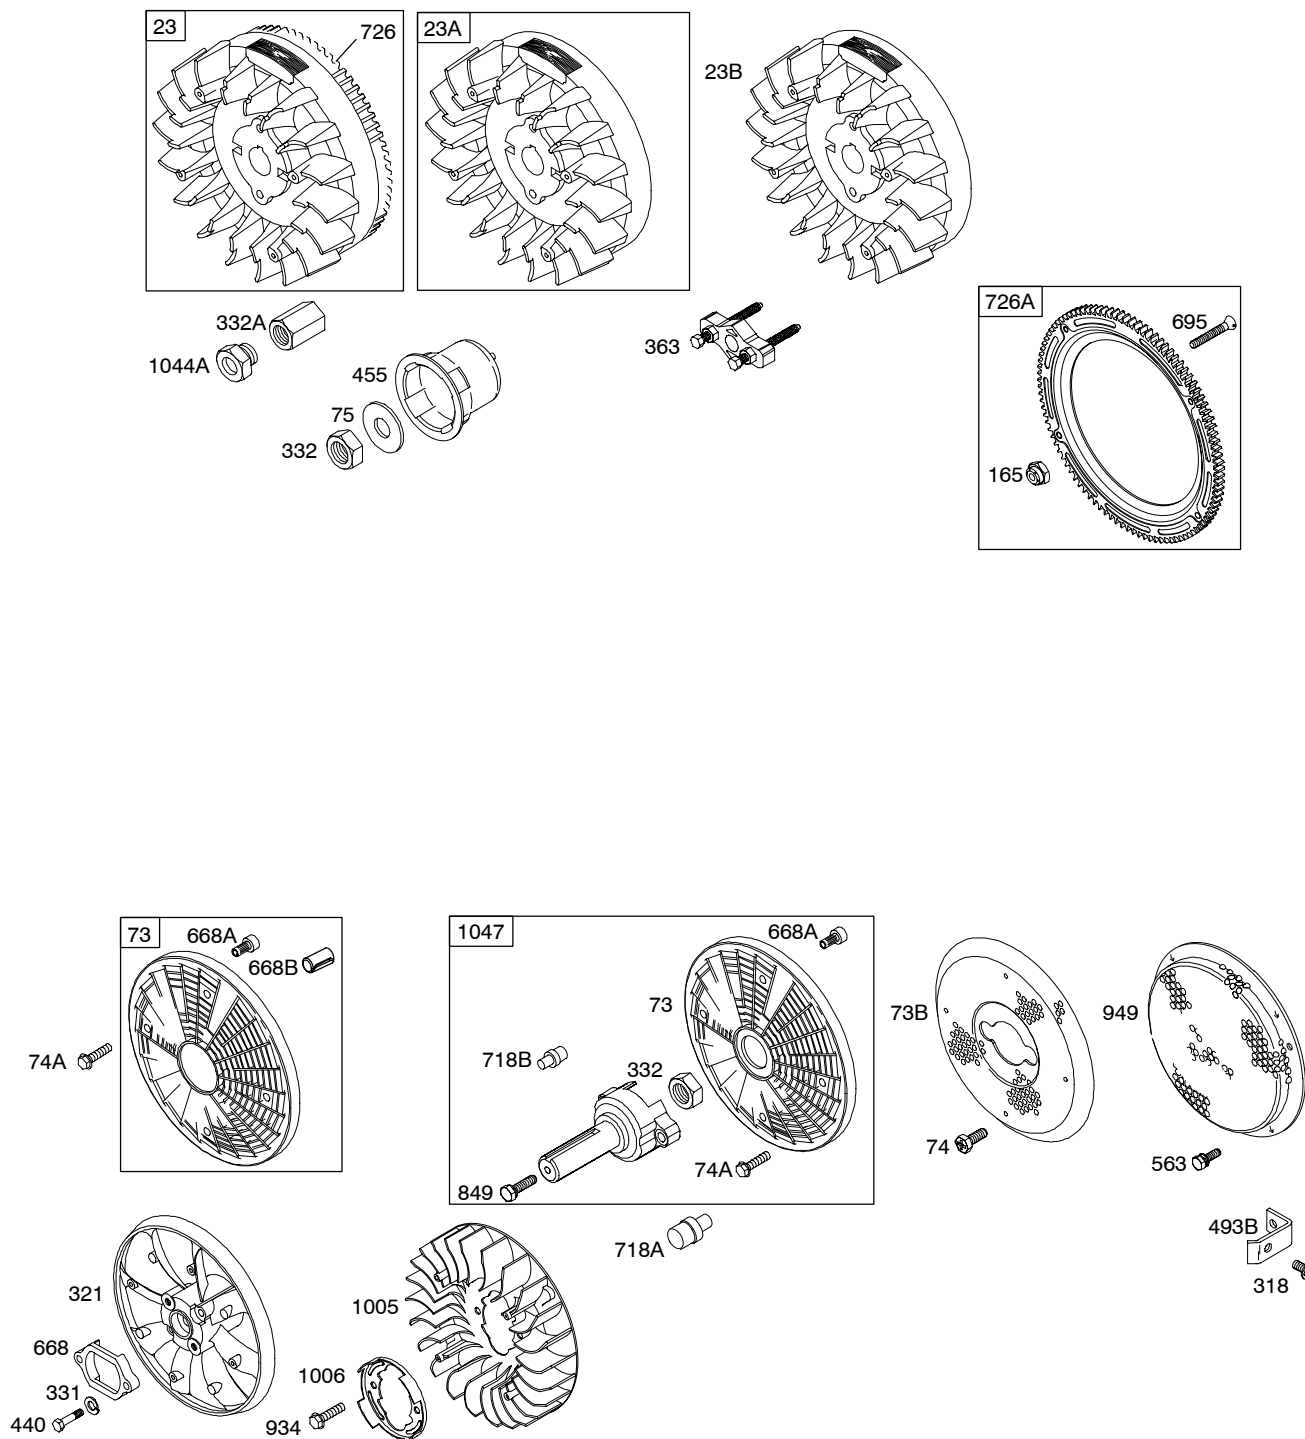


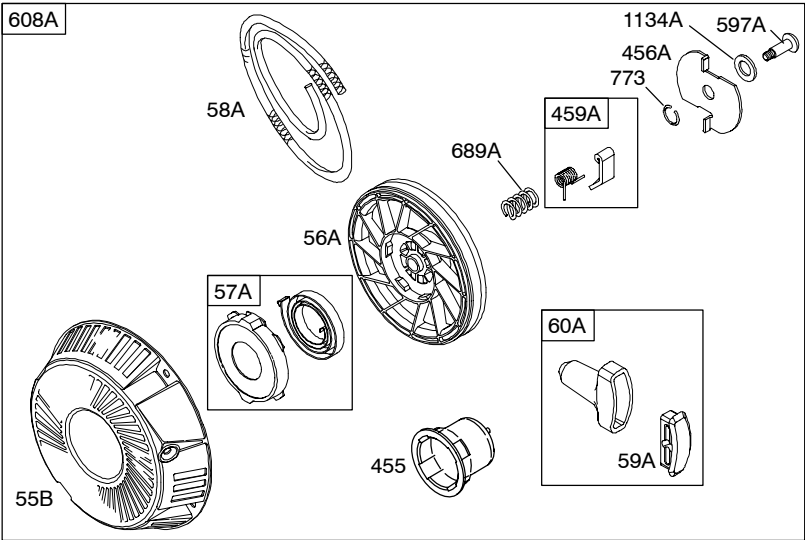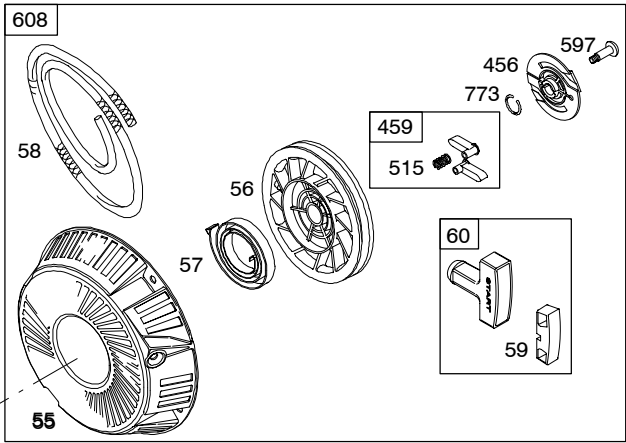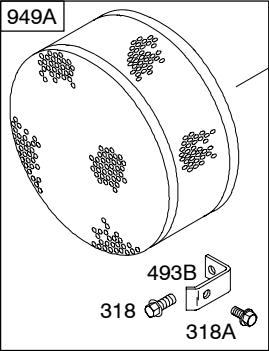

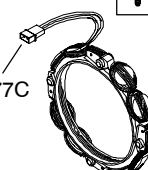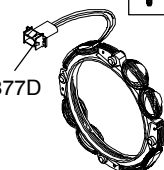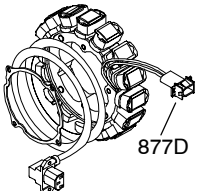DUAL CIRCUIT		5 – 9 AMP		10 – 16 AMP		20 AMP		20 AMP POWER LINK
474B	1059	474C	1059	474D	1059	474E	1059	474F
								
								
NOTE: All stators use a No. 1119 mounting screw. 							 501A	 501
								 501B

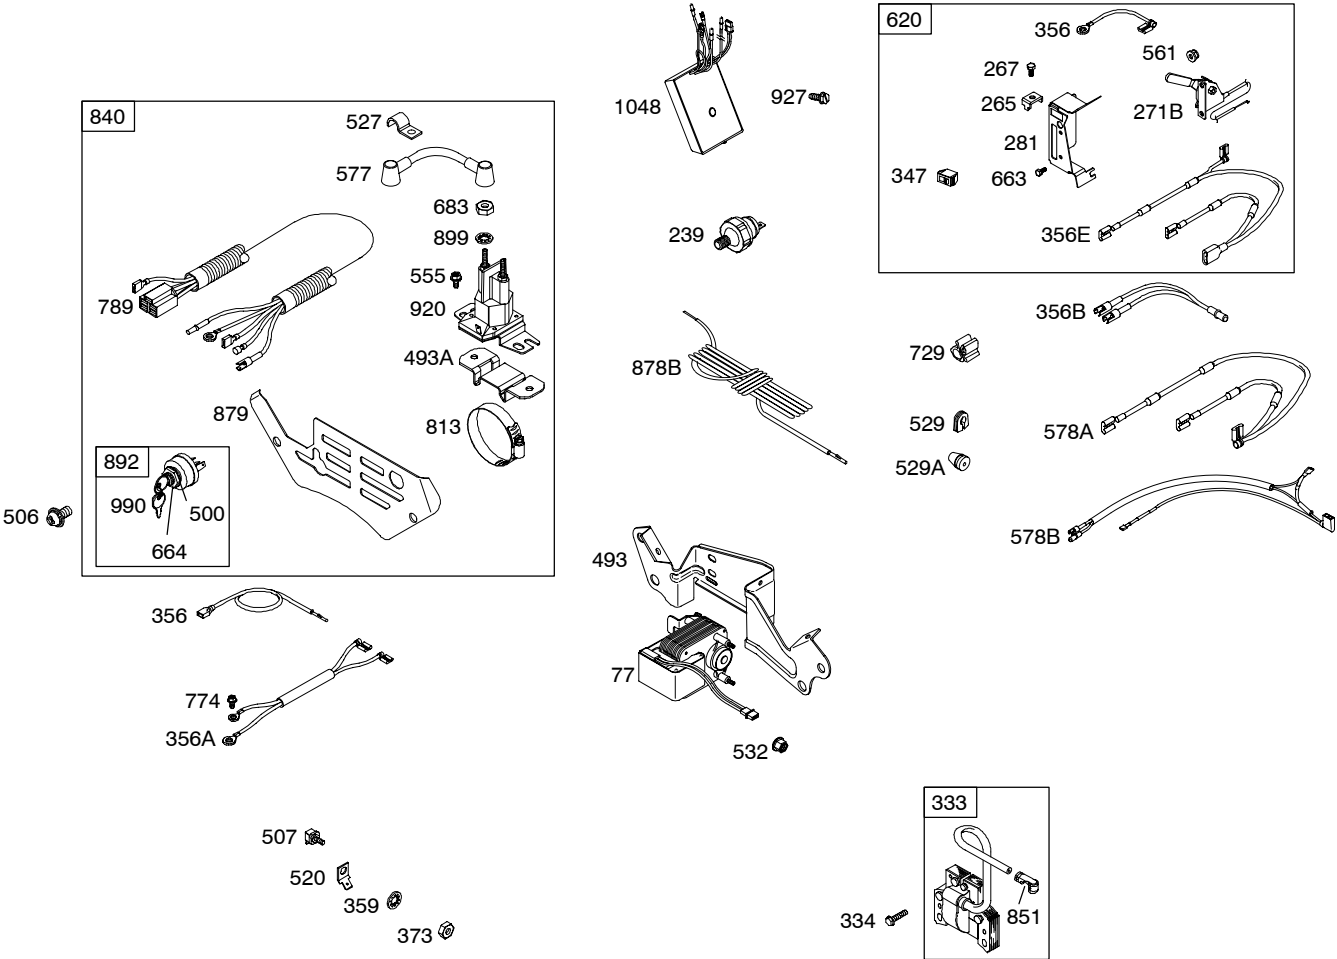

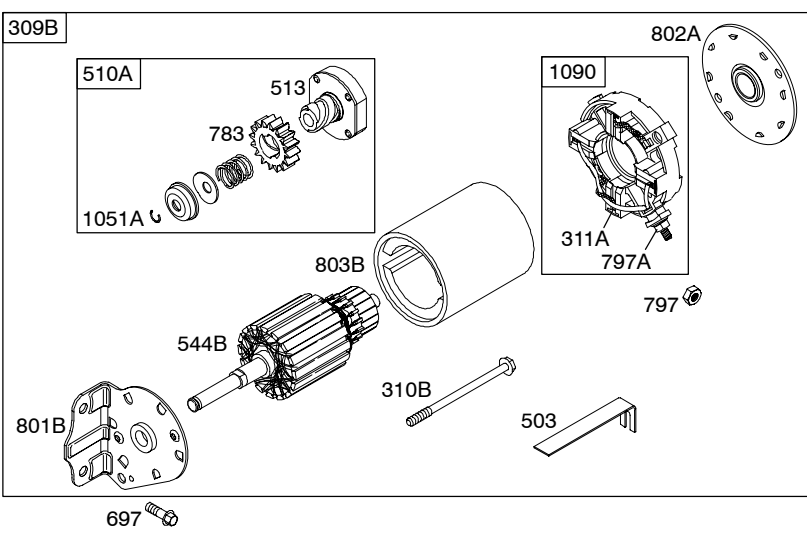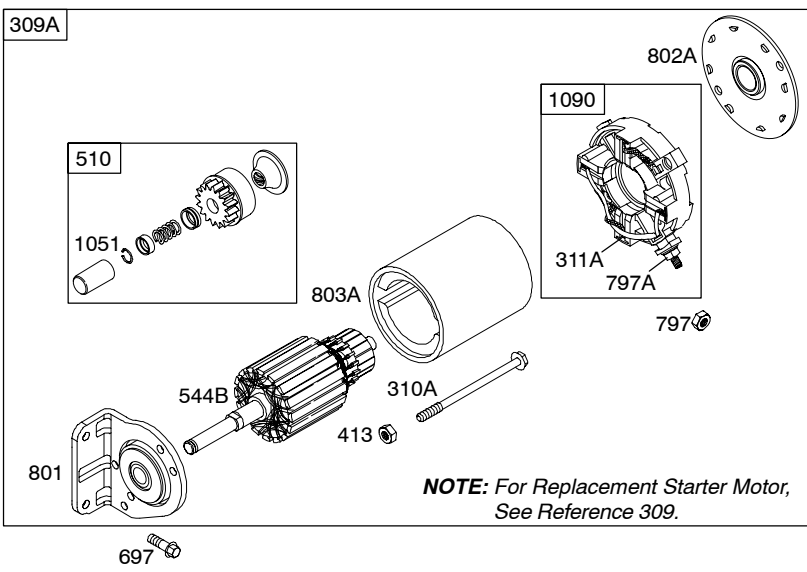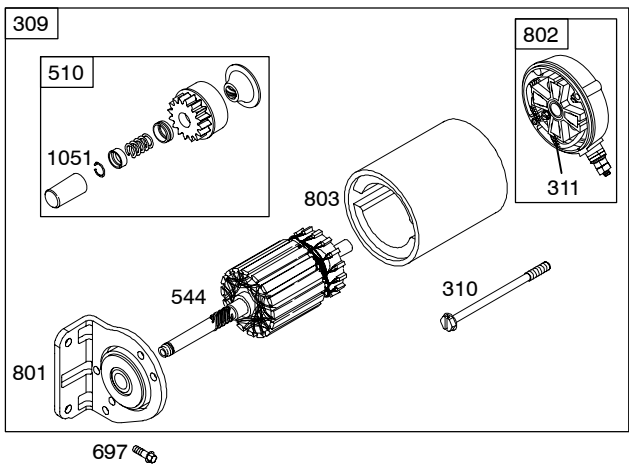

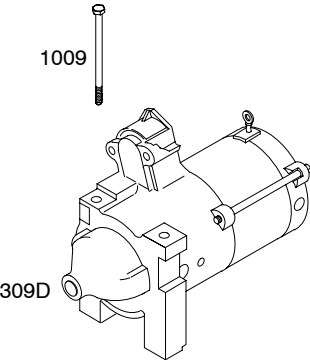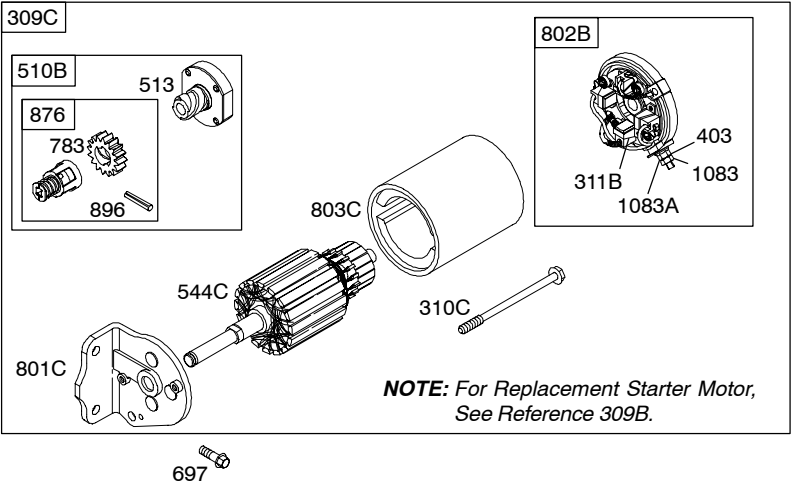

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	692544	Cylinder Assembly (Used After Code Date 97043000). ----- Note ----- 690903 Cylinder Assembly (Used Before Code Date 97050100). 841146 Cylinder Assembly Used on Type No(s). 1268, 1312. 841562 Cylinder Assembly Used on Type No(s). 1416.	8	808984	Breather Assembly		692173	Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1003, 1005, 1011, 1042, 1052, 1078, 1081, 1085, 1105, 1113, 1120, 1121, 1123, 1125, 1129, 1131, 1132, 1150, 1156, 1160, 1167, 1190, 1194, 1203, 1213, 1222, 1227, 1277, 1284, 1378, 1398, 1399, 1401. 807780 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0003, 0004, 0005, 0006, 0012, 0042, 0052, 0078, 0081, 0082, 0121, 0125, 0129, 0130, 0131, 0132, 0150, 0155, 0160, 0167, 1003, 1004, 1005, 1006, 1011, 1042, 1052, 1078, 1081, 1085, 1121, 1122, 1123, 1125, 1127, 1129, 1131, 1132, 1150, 1156, 1159, 1160, 1167, 1190, 1194, 1203, 1213, 1222, 1227.	
2	808534	Kit-Bushing/Seal (Magneto Side) (Used After Code Date 97043000). ----- Note ----- 807687 Kit- Bushing/Seal (Magneto Side) (Used Before Code Date 97050100).	9	★809094	Gasket-Breather				
			10	690751	Screw (Breather Assembly)				
3	★805101s	Seal-Oil (Magneto Side)	11	691556	Tube-Breather				
5	809185	Head-Cylinder (Cylinder 1)	11A	806083s	Tube-Breather				
5A	809186	Head-Cylinder (Cylinder 2)	12	★691684	Gasket-Crankcase				
6	Δ805193	Washer (Cylinder Head) (Used Before Code Date 94050100).	13	692059	Screw (Cylinder Head)				
7	★690888	Gasket-Cylinder Head (Graphoil) (Used After Code Date 96033100).	15	690946	Plug-Oil Drain				
7A★Δ805653s		Gasket-Cylinder Head (Metal) (Used Before Code Date 96040100).	16	809842	Crankshaft (Used After Code Date 97043000). ----- Note ----- 807778 Crankshaft (Used Before Code Date 97050100). 809804 Crankshaft (Used After Code Date 03043000). Used on Type No(s). 1077, 1080, 1110, 1377. 692170 Crankshaft (Used After Code Date 97043000 and Before Code Date 03050100). Used on Type No(s). 1077, 1080, 1110, 1172, 1276, 1377. 807777 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0077, 0080, 1077, 1080, 1172, 1175. 807779 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0113, 0157, 1113, 1157.				

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		692175 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1115.			809842 Crankshaft Used on Type No(s). 1268, 1309.			808776 Flywheel (Steel Ring Gear) Used on Type No(s). 1277, 1296, 1300, 1399, 1412.
		808005 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0115, 1115.			808824 Crankshaft Used on Type No(s). 1266.			841169 Flywheel Used on Type No(s). 1415, 1416.
		809821 Crankshaft (Used After Code Date 03043000). Used on Type No(s). 1137, 1138, 1151, 1152, 1162.			809807 Crankshaft Used on Type No(s). 1157.	23A	690921	Flywheel
		809820 Crankshaft (Used Before Code Date 03050100). Used on Type No(s). 1137, 1138, 1151, 1152, 1162.			809836 Crankshaft (Used After Code Date 03043000). Used on Type No(s). 1116.	23B	690922	Flywheel (Rewind Starter)
		692177 Crankshaft (Used After Code Date 97043000). Used on Type No(s). 1174.			692089 Crankshaft (Used Before Code Date 03050100). Used on Type No(s). 1116.	25	808326	Piston Assembly (Standard) ----- Note -----
		808236 Crankshaft (Used Before Code Date 97050100). Used on Type No(s). 0155, 1155, 1174.	17	690752	Bearing-Ball			808337 Piston Assembly (.020" Oversize)
		809806 Crankshaft Used on Type No(s). 1269, 1308, 1313, 1316, 1317, 1318, 1319, 1332, 1333, 1334, 1416, 1421.	18	808847	Cover-Crankcase ----- Note -----	26	807889	Ring Set (Standard) ----- Note -----
		809833 Crankshaft (Used After Code Date 03043000). Used on Type No(s). 1087.			808850 Cover-Crankcase Used on Type No(s). 0155, 1155, 1174.			807995 Ring Set (.020" Oversize)
		691139 Crankshaft (Used Before Code Date 03050100). Used on Type No(s). 1087.			808508 Cover-Crankcase Used on Type No(s). 0081, 0082, 0083, 0151, 0152, 1009, 1012, 1081, 1105, 1120, 1151, 1152, 1209, 1222, 1227, 1276, 1277, 1399.	27	690683	Lock-Piston Pin
			20	*805049	Seal-Oil (PTO Side)	28	807886	Pin-Piston (Standard)
			21	809500	Cap-Oil Fill	29	807900s	Rod-Connecting (Standard) ----- Note -----
			22	807362	Screw (Crankcase Cover/Sump)			807803 Rod-Connecting (.020" Undersize)
			23	808768	Flywheel (Steel Ring Gear) ----- Note -----	32	690698	Screw (Connecting Rod)
					808772 Flywheel (Steel Ring Gear) Used on Type No(s). 1009, 1012, 1028, 1029, 1057, 1108, 1241, 1276, 1282, 1288, 1299.	33A	807681	Valve-Exhaust
						34A	807680	Valve-Intake
						35	692084	Spring-Valve (Intake)
						36	692084	Spring-Valve (Exhaust)
						37	690715	Guard-Flywheel (Black) ----- Note -----
								841309 Guard-Flywheel Used on Type No(s). 1001, 1065, 1067, 1102, 1137, 1156, 1186, 1194, 1256, 1263, 1313, 1365.

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
39	690745	Deflector–Oil	60	808167	Grip–Starter Rope	98	808177	Kit–Idle Speed
40	692058	Retainer–Valve	60A	490652	Grip–Starter Rope	98A	807923	Kit–Idle Speed
42	807683	Keeper–Valve	65	691982	Screw			----- Note -----
45	690977	Tappet–Valve			(Rewind Starter)			808981 Kit–Idle Speed
46	691557	Camshaft	73	494439	Screen–Rotating			Used on Type No(s).
		----- Note -----			(8 9/32" Diameter)			1331.
		692157 Camshaft	73B	690478	Screen–Rotating	102A	●692077	Gasket–Carburetor
		Used on Type No(s).			(9 3/32" Diameter)			Body
		0081, 0082, 0083,	74	691655	Screw	102B	●272460	Gasket–Carburetor
		0151, 0152, 1009,			(Rotating Screen)			Body
		1012, 1081, 1105,	74A	691647	Screw	104	●690723	Pin–Float Hinge
		1120, 1151, 1152,			(Rotating Screen)	104B	●231784	Pin–Float Hinge
		1209, 1222, 1227,	75	691490	Washer	105	●807925	Valve–Float Needle
		1276, 1277, 1399.			(Flywheel)			----- Note -----
		842064 Camshaft	77	690819	Motor–Servo			808798 Valve–Float
		Used on Type No(s).	78	690688	Screw			Needle
		0137, 0138, 0162,			(Flywheel Guard)			Used on Type No(s).
		1137, 1138, 1162,	91	809208	Body–Upper			1410.
		1401.			Carburetor	105A	●805620	Valve–Float Needle
50	690754	Manifold–Intake			Used on Type No(s).			Used on Type No(s).
		----- Note -----			1331, 1332.			1057, 1065, 1066,
		692124 Manifold–	91B	807929	Body–Upper			1067, 1085, 1096,
		Intake			Carburetor			1109, 1125, 1162,
		Used on Type No(s).	94	●808399	Kit–Idle Mixture			1185, 1186, 1190,
		1206.			Used on Type No(s).			1194, 1201, 1220,
51	Δ★691694	Gasket–Intake			1318, 1319, 1331,			1234, 1250, 1254,
		(Manifold To			1333, 1421.			1256, 1263, 1268,
		Carburetor)	94A	●808259	Kit–Idle Mixture			1269, 1289, 1296,
51A	★692035	Gasket–Intake			(Used After Code Date			1300, 1313, 1365,
		(Manifold to Head)			94123100).			1366, 1396, 1401,
54	690676	Screw			----- Note -----	108A	806134	Valve–Choke
		(Intake Manifold)			494923 Kit–Idle			----- Note -----
55	691568	Housing–Rewind			Mixture			690719 Valve–Choke
		Starter			(Used Before Code			Used on Type No(s).
55B	492193	Housing–Rewind			Date 95010100).			1331.
		Starter	95	●690718	Screw	108B	224535	Valve–Choke
56	692085	Pulley–Starter			(Throttle Valve)	109	808398	Shaft–Choke
56A	280918	Pulley–Starter	95A	●94635	Screw	109A	809096	Shaft–Choke
57	692086	Spring–Rewind Starter			(Throttle Valve)			Used on Type No(s).
57A	492194	Spring–Rewind Starter	97	809007	Shaft–Throttle			1331.
58	66574	Rope–Starter			Used on Type No(s).	110	806861	Washer
		(Cut To Required			1331.			(Choke Shaft)
		Length)	97B	809062	Shaft–Throttle	117B	231660	Jet–Main
58A	695002	Rope–Starter			(Used After Code Date			(Standard)
		(Cut To Required			00071100).			----- Note -----
		Length)	97C	808397	Shaft–Throttle			808406 Jet–Main
59	805957	Insert–Grip			(Used Before Code			(Standard)
59A	490652	Insert–Grip			Date 00071200).			Used on Type No(s).
								1331.

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

Δ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION			
117C	●806126	Jet–Main (Standard) ----- Note ----- 231829 Jet–Main (Standard) Used on Type No(s). 0002, 0004, 0006, 0008, 0027, 0040, 0048, 0055, 0058, 0068, 0070, 0076, 0120, 0123, 0125, 0137, 0138.	121E	808274	Kit–Carburetor Overhaul (Used Before Code Date 95080100). ----- Note ----- 808083 Kit–Carburetor Overhaul (Used Before Code Date 95010100). Used on Type No(s). 0002, 0004, 0006, 0008, 0027, 0040, 0048, 0055, 0058, 0068, 0070, 0076, 0120, 0123, 0125, 0137, 0138.			809217 Carburetor (Includes Solenoid) Used on Type No(s). 1331, 1332. 842736 Carburetor (Includes Solenoid) Used on Type No(s). 1410.			
118	809685	Jet–Main (High Altitude) ----- Note ----- 809442 Jet–Main (High Altitude) Used on Type No(s). 1331.	122	690691	Spacer–Carburetor Used on Type No(s). 1331, 1332.	125C		Carburetor (For Replacement, Order Reference 125B)			
118B	231669	Jet–Main (High Altitude) ----- Note ----- 231806 Jet–Main (High Altitude) Used on Type No(s). 0002, 0004, 0006, 0008, 0027, 0040, 0048, 0055, 0058, 0068, 0070, 0076, 0120, 0123, 0125, 0137, 0138.	122A	690747	Spacer–Carburetor	127	●690727	Plug–Welch			
			125B	809019	Carburetor (Gravity Feed) ----- Note ----- 809017 Carburetor (Nikki Carburetor) (Replaces Mikuni Carburetor)(Also Order Ref. No. 947A,Part No. 692094,Solenoid–Fuel) Used on Type No(s). 0064, 0075, 0079, 0158, 0163, 0166, 1005, 1012, 1013, 1026, 1029, 1042, 1046, 1047, 1064, 1075, 1077, 1078, 1079, 1080, 1081, 1084, 1086, 1087, 1100, 1102, 1108, 1109, 1111, 1116, 1118, 1139, 1145, 1156, 1174, 1195, 1198, 1206, 1209, 1225, 1241, 1243, 1244, 1246, 1253, 1264, 1273, 1274, 1275, 1279, 1282, 1283, 1284, 1290, 1294, 1299, 1302, 1308, 1312, 1315, 1316, 1317, 1318, 1375, 1377, 1378, 1397, 1399, 1402, 1409, 1410, 1416, 1421.	130A	690726	Valve–Throttle Used on Type No(s). 1331.	130C	806132	Valve–Throttle (Used After Code Date 94123100). ----- Note ----- 224533 Valve–Throttle (Used Before Code Date 95010100).
						131A	807924	Kit–Throttle Shaft			
						132A	690863	Stop–Throttle ----- Note ----- 692155 Stop–Throttle Used on Type No(s). 1145.			
119	690720	Screw (Upper To Lower Carburetor Body)				133A	806961	Float–Carburetor			
119A	94634	Screw (Upper To Lower Carburetor Body)				141A	807928	Kit–Choke Shaft			
121A	809024	Kit–Carburetor Overhaul (Used After Code Date 95073100).				142A	●806128	Nozzle–Carburetor (Standard) ----- Note ----- 690725 Nozzle– Carburetor (Standard) Used on Type No(s). 1331.			
						142C	231782	Nozzle–Carburetor (Standard)			
						146	691639	Key–Timing			
						147	●231783	Jet–Pilot			
						151	841185	Stud (Exhaust Manifold)			

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
161	691561	Base-Air Cleaner (Metal) ----- Note ----- 842830 Base-Air Cleaner (Metal) Used on Type No(s). 0127, 0136, 0145, 0169, 1109, 1136, 1145, 1246, 1275, 1280, 1299, 1308, 1315, 1316, 1333.	187A	791801	Line-Fuel (Molded) (Used After Code Date 05063000). ----- Note ----- 691049 Line-Fuel (Molded) (Used Before Code Date 05070100).			691507 Spring-Governor (Brown) Used on Type No(s). 0026, 1026, 1029, 1405, 1409, 1414, 1416, 1421.
161B	808414	Base-Air Cleaner (Metal)	187B	692107	Line-Fuel			690710 Spring-Governor (Main) Used on Type No(s). 0124, 0133, 1133, 1170, 1176, 1189, 1251, 1261, 1294.
163	★692081	Gasket-Air Cleaner	187C	692106	Line-Fuel			692071 Spring-Governor (White) Used on Type No(s). 0064, 0084, 0169, 1028, 1064, 1084, 1108, 1109, 1145, 1173, 1273, 1279, 1280, 1306, 1333, 1397.
163B	★692052	Gasket-Air Cleaner	187D	692108	Line-Fuel			691508 Spring-Governor (Blue) Used on Type No(s). 0115, 0158, 1115, 1116, 1158, 1169, 1198, 1204, 1224, 1225, 1253, 1266, 1269, 1274, 1275, 1308, 1311, 1315, 1318, 1402.
165	693148	Nut (Ring Gear)	188	692056	Screw (Control Bracket) (14mm Bracket) ----- Note ----- 692062 Screw (Control Bracket) (18mm Bracket)			692072 Spring-Governor (Purple) Used on Type No(s). 1246, 1256, 1263.
167	692297	Seal-Air Cleaner Nut	190	692199	Screw (Fuel Tank)			690716 Spring-Governor (Green) Used on Type No(s). 0027, 0048, 0080, 0086, 0113, 0153, 0157, 1027, 1080, 1086, 1110, 1113, 1153, 1157, 1230, 1241, 1415.
182	492317	Bracket-Fuel Tank	190A	94536	Screw (Fuel Tank)			
182A	690778	Bracket-Fuel Tank	192	807623	Adjuster-Rocker Arm			
182B	690779	Bracket-Fuel Tank	197	807163	Screw (Back Plate)			
182C	690780	Bracket-Fuel Tank	203	690923	Crank-Bell			
182D	690781	Bracket-Fuel Tank	205	692083	Screw (Bell Crank)			
182E	841601	Bracket-Fuel Tank	206	691244	Nut-Governor Adjusting (Used After Code Date 96033100).			
182F	691520	Bracket-Fuel Tank	208	691549	Rod-Governor Control (Used After Code Date 96033100).			
182G	841600	Bracket-Fuel Tank	208A	808453	Rod-Governor Control (Used After Code Date 94113000 and Before Code Date 96040100).			
182H	691524	Bracket-Fuel Tank	209	692070	Spring-Governor (Red) ----- Note ----- 691506 Spring-Governor (Yellow) Used on Type No(s). 0042, 0052, 0078, 0160, 1011, 1042, 1052, 1078, 1160, 1284, 1378, 1398, 1410.			
182J	691525	Bracket-Fuel Tank						
187	791766	Line-Fuel (Cut To Required Length) (Used After Code Date 05063000). ----- Note ----- 691050 Line-Fuel (Cut To Required Length) (Used Before Code Date 05070100). 809499 Line-Fuel (Cut To Required Length) Used on Type No(s). 1111.						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		805630 Spring–Governor (Black) Used on Type No(s). 0137, 0138, 0162, 1137, 1138, 1162.			691553 Spring–Governed Idle Used on Type No(s). 1169, 1173, 1224, 1225, 1273, 1274, 1282, 1294, 1299, 1306.	234	691723	Clip–Control Rod
		806507 Spring–Governor (Black) Used on Type No(s). 1282.			806868 Spring–Governed Idle Used on Type No(s). 1259, 1331, 1332.	239	690233	Switch–Oil Pressure (Lower) ----- Note -----
		806872 Spring–Governor (Orange) Used on Type No(s). 1259, 1331, 1332.	211A	690707	Spring–Governed Idle Used on Type No(s). 0003, 0004, 0005, 0006, 0012, 0121, 0125, 0129, 0130, 0131, 0132, 0150, 0155, 0167, 1003, 1004, 1005, 1006, 1085, 1113, 1121, 1122, 1123, 1125, 1127, 1129, 1131, 1132, 1150, 1155, 1156, 1159, 1167, 1174, 1190, 1194, 1203, 1213, 1292.		240	394358s Filter–Fuel ----- Note -----
209A	690709	Spring–Governor (Main) Used on Type No(s). 0003, 0004, 0005, 0006, 0012, 0121, 0125, 0129, 0130, 0131, 0132, 0150, 0155, 0167, 1003, 1004, 1005, 1006, 1085, 1113, 1121, 1122, 1123, 1125, 1127, 1129, 1131, 1132, 1150, 1155, 1156, 1159, 1167, 1174, 1190, 1194, 1203, 1213, 1292.	212	690712	Link–Throttle	240A	691035	Filter–Fuel
			212A	691519	Link–Throttle	240B	808116s	Filter–Fuel
			216	690705	Link–Choke	254	807921	Drain–Carburetor Bowl
			217	806862	Spring–Choke Return	255	690721	Bushing–Choke Shaft
			222	808454	Bracket–Control (Used With Control Lever And/Or Wire With "Z" Formed End)	262	692083	Screw (Rod Bracket)
210	691370	Strainer–Fuel				265	691024	Clamp–Casing
211	692069	Spring–Governed Idle ----- Note -----	222A	690918	Bracket–Control (Used With Control Lever And/Or Wire With "L" Formed End)	267	692083	Screw (Casing Clamp)
		692068 Spring–Governed Idle Used on Type No(s). 0042, 0052, 0078, 0137, 0138, 0160, 0162, 1011, 1042, 1052, 1078, 1116, 1137, 1138, 1160, 1162, 1259, 1284, 1331, 1378, 1398, 1401, 1410.	226	692075	Rod–Hand Choke	268	691025	Casing–Control Wire (Cut To Required Length)
		691505 Spring–Governed Idle Used on Type No(s). 0026, 0086, 1026, 1029, 1086, 1108, 1241, 1416.	227	690236	Lever–Governor Control	269	691026	Wire–Control (Cut To Required Length)
			231	690718	Screw (Choke Valve)	270	691027	Nut (Control Wire Casing)
			231B	94457	Screw (Choke Valve)	271	692541	Lever–Control (Cable Wire With "Z" Formed End)
			232	692073	Spring–Governor Link	271A	692105	Lever–Control (Cable Wire With "L" Formed End)
						271B	691028	Lever–Control
						273	690681	Seal–O Ring (Oil Pump)
						276	690704	Washer–Sealing (Governor Crank)

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
276A	★△807085	Washer–Sealing (Head)(Rocker Cover) (Used After Code Date 01120200). ----- Note ----- 691766 Washer– Sealing (Head)(Rocker Cover) (Used Before Code Date 01120300).	304	690929	Housing–Blower (Black) ----- Note ----- 690930 Housing– Blower (Red)	309	691564	Motor–Starter (Steel Ring Gear Only)
276B	690724	Washer–Sealing (Carburetor Plug)	305	841233	Screw (Blower Housing) (6mm) ----- Note ----- 692056 Screw (Blower Housing) (14mm)	309A		Motor–Starter (For Replacement Starter Motor, Order Reference 309)
276C	●806137	Washer–Sealing (Solenoid)	308	841183	Cover–Cylinder Head (Cylinder 1) (Non Ducted) ----- Note ----- 841317 Cover– Cylinder Head (Cylinder 1) Used on Type No(s). 1013, 1084, 1111, 1116, 1118, 1139, 1195, 1198, 1206, 1244, 1311, 1317, 1318, 1402, 1405, 1409, 1414, 1421. 841316 Cover– Cylinder Head (Cylinder 2) Used on Type No(s). 1010, 1013, 1084, 1111, 1116, 1118, 1139, 1158, 1195, 1198, 1206, 1217, 1244, 1311, 1317, 1318, 1402, 1405, 1409, 1414, 1421.	309B	499521	Motor–Starter (Aluminum Ring Gear)
276E	●692343	Washer–Sealing (Solenoid)				309C		Motor–Starter (Services Aluminum Ring Gear Only)(For Replacement See Reference 309B)
278	842122	Washer (Governor Control Lever)				309D	808817	Motor–Starter Used on Type No(s). 1268, 1312.
280	691526	Bracket–Rod				310	496880	Screw (Starter Motor) (4 1/4" Long)
281	690742	Panel–Control				310A	690323	Screw (Starter Motor) (4 7/16" Long)
282	692083	Screw (Control Lever)				310B	691263	Screw (Starter Motor) (4 13/16" Long)
287	692062	Screw (Dipstick Tube)				310C	692329	Screw (Starter Motor) (5–3/8" Long)
287A	806660	Screw (Dipstick Tube) Used on Type No(s). 1195.				311	496887	Brush Set
300		Muffler (For Replacement Muffler, Use 692099)				311A	497608	Brush Set
300B	498984s	Muffler (High On The Side)				311B	490311	Brush Set (4 9/16" Housing Length)
300C	807752	Muffler (High On The Side)				318	690932	Screw (Mounting Bracket)
300D	692099	Muffler (Lo Mount)(Starter Motor Side Or Oil Filter Side)	308F	841182	Cover–Cylinder Head (Cylinder 2)(Non Ducted)	318A	691982	Screw (Mounting Bracket)
300E	690906	Muffler (Hi Mount)(Starter Side Exit)	308G	692805	Cover–Cylinder Head (Cylinder 2) (Non Ducted)	321	690379	Fan–Booster
300F	690931	Muffler (Hi Mount)(Starter Side Exit)				322	841233	Screw (Cylinder Head Cover)
300G	691562	Muffler (Hi Mount) (Oil Filter Side Exit)				322A	692067	Screw (Cylinder Head Cover)
300H	807831	Muffler (Hi Mount) (Starter Side Exit)				331	691075	Washer (Booster Fan)
						332	690887	Nut (Flywheel)
						332A	805744	Nut (Flywheel)
						333	492341	Armature–Magneto
						334	692066	Screw (Magneto Armature)

★ Included in Engine Gasket Set–Ref. No. 358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
337	491055s	Plug-Spark ----- Note ----- 496018s Plug-Spark Used on Type No(s). 0010, 0115, 0163, 1010, 1115, 1116, 1163, 1170, 1176, 1331, 1332. 792015 Plug-Spark Used on Type No(s). 1001, 1005, 1009, 1013, 1026, 1042, 1046, 1047, 1065, 1066, 1067, 1079, 1085, 1087, 1096, 1105, 1113, 1120, 1125, 1145, 1156, 1157, 1174, 1185, 1186, 1194, 1234, 1243, 1246, 1247, 1250, 1251, 1253, 1254, 1256, 1261, 1263, 1266, 1268, 1269, 1275, 1283, 1288, 1289, 1290, 1292, 1296, 1300, 1302, 1308, 1309, 1311, 1312, 1315, 1317, 1318, 1319, 1331, 1333, 1365, 1366, 1375, 1377, 1378, 1396, 1399, 1400, 1401, 1402, 1405, 1409, 1410, 1413, 1414, 1421.	356A	690809	Wire-Stop	436B	691501	Manifold-Exhaust (For Customer Supplied Muffler) (Oil Filter Side Exit)
			356B	692961	Wire-Stop			
			356E	691999	Wire-Stop	436D	691502	Manifold-Exhaust (For Customer Supplied Muffler) (Starter Side Exit)
			357	691483	Key-Drive Pulley	436F	805609	Manifold-Exhaust (High On The Side)
			358	841188	Gasket Set-Engine (Used After Code Date 01120200). ----- Note ----- 808389 Gasket Set-Engine (Used Before Code Date 01120300).	437	691902	Screw (Exhaust Manifold)
			359	691077	Washer (Ground Terminal)	439	★692154	Seal-O Ring (Crankcase Cover/Sump) (Used After Code Date 97043000). ----- Note ----- 805198 Seal-O Ring (Crankcase Cover/Sump) (Used Before Code Date 97050100).
			363	19203	Puller-Flywheel	440	690342	Screw (Booster Fan)
			365	690711	Screw (Carburetor)	445	394018s	Filter-Air Cleaner Cartridge
			373	691612	Nut (Ground Terminal)	445B	393957s	Filter-Air Cleaner Cartridge
			377	808095	Key-Woodruff	447	841233	Screw (Air Guide Cover)
			383	19374s	Wrench-Spark Plug ----- Note ----- 19576s Wrench-Spark Plug Used on Type No(s). 1157, 1243, 1253, 1266, 1275, 1290, 1308, 1309, 1311, 1318, 1399, 1402, 1405, 1410, 1413.	455	690864	Cup-Flywheel (Used After Code Date 93081500). ----- Note ----- 807881 Cup-Flywheel (Used Before Code Date 93081600).
			385	807084	Screw (Fuel Pump)	456	691529	Plate-Pawl Friction
			387	808656	Pump-Fuel	456A	224228	Plate-Pawl Friction
			387A	808969	Pump-Fuel	459	808166	Pawl-Ratchet
			403	690288	Washer (End Cap)	459A	492431	Pawl-Ratchet
			413	693587	Nut (Starter Motor)	467	691985	Knob-Air Cleaner
			415	690283	Plug (Intake Manifold)	467B	691668	Knob-Air Cleaner
			432	691509	Cap-Spring	468	★690690	Seal-O Ring (Oil Pump Screen)
			436	692061	Manifold-Exhaust (Lo Mount) (Oil Filter Side)	474B	696459	Alternator (Dual Circuit) Used on Type No(s). 1277, 1399.
			436A	691499	Manifold-Exhaust (Lo Mount) (Starter Motor Side)			
338	691312	Gasket-Dipstick (Dipstick Gasket)						
346	690661	Screw (Spark Arrestor)						
347	691995	Switch-Rocker						
349	690238	Nut (Cylinder Head Cover)						
355	842122	Washer (Muffler Bracket)						
355A	690944	Washer (Muffler Bracket)						
356	690796	Wire-Stop						

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
474C	696457	Alternator (5 To 9 Amp Regulated) Used on Type No(s). 0121, 1121, 1292, 1412.		841170	Regulator (20 Amp) Used on Type No(s). 1416.	525C	690897	Tube-Dipstick (Used Before Code Date 98060100). ----- Note -----
474D	696458	Alternator (10-16 Amp Regulated)	503	691532	Strap-Starter		690907	Tube-Dipstick (Used Before Code Date 98060100). Used on Type No(s). 0115, 0124, 0139, 1105, 1111, 1115, 1139, 1206.
474E	696579	Alternator (20 Amp) Used on Type No(s). 1009, 1012, 1028, 1029, 1057, 1108, 1241, 1264, 1276, 1282, 1288, 1299.	505	690238	Nut (Governor Control Lever)	526	692067	Screw (Regulator)(10-16 Amp Regulated)
474F	841178	Alternator (20 Amp) Used on Type No(s). 1416.	506	690677	Screw (Carburetor Cover)	526A	690717	Screw (Regulator)(5 To 9 Amp Regulated)
479	807084	Screw (Oil Pump Screen)	507	691972	Insulator	526B	691547	Screw (Regulator)(20 Amp)
493	691518	Bracket-Mounting	510	496881	Drive-Starter (Used With Steel Ring Gear)	527	690423	Clamp-Tube
493A	691177	Bracket-Mounting (Solenoid)	510A	696541	Drive-Starter (Used With Aluminum Ring Gear)	529	690744	Grommet
493B	691503	Bracket-Mounting (Solenoid) Used on Type No(s). 0153, 1266.	510B	696540	Drive-Starter	529A	691527	Grommet ----- Note -----
500	691086	Washer (Key Switch)	513	692024	Clutch-Drive		805783	Grommet (Breather Extension)
501	691185	Regulator (10-16 Amp Regulated)	515	691528	Spring-Pawl	532	691115	Nut (Mounting Bracket)
501A	691188	Regulator (5 To 9 Amp Regulated) Used on Type No(s). 0121, 1121, 1292, 1296, 1300, 1412.	520	691084	Terminal-Ground	544		Armature-Starter (Service With 691564 Starter Motor Only)
501B	691573	Regulator (20 Amp) Used on Type No(s). 1009, 1012, 1028, 1029, 1057, 1108, 1241, 1264, 1276, 1282, 1288, 1299. ----- Note ----- 808877 Regulator Used on Type No(s). 1302.	523	692100	Dipstick (Used Before Code Date 98060100).	544B		Armature-Starter (Serviced By 499521 Starter Motor Only)
			523A	693175	Dipstick (Used After Code Date 98053100).	544C	490309	Armature-Starter (4 3/8" Housing Length)
			524	★693172	Seal-Dipstick Tube (Used After Code Date 98053100).	552	690701	Bushing-Governor Crank (Output End)
			524A	281370s	Seal-Dipstick Tube (Used Before Code Date 98060100).	552A	806686	Bushing-Governor Crank (Flanged)
			525	693174	Tube-Dipstick (Standard) (Used After Code Date 98053100).	555	692067	Screw (Starter Solenoid)
			525A	693173	Tube-Dipstick (Used After Code Date 98053100). Used on Type No(s). 1081, 1105, 1109, 1111, 1139, 1206, 1299.	561	690713	Nut (Control Lever)
						562	690239	Bolt (Governor Control Lever)
						563	691982	Screw (Debris Screen Guard)
						565	690682	Stud (Oil Filter Adapter)

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
572	690686	Baffle-Breather	613A	841233	Screw (Muffler)	638A	690706	Washer (Cylinder Head Cover)(Spring Lockwasher)
573	841310	Plate-Back			----- Note -----			
		----- Note -----			----- Note -----			
	693045	Plate-Back Used on Type No(s). 1312.		690297	Screw (Muffler) (Used After Code Date 97012300).	643	692079	Retainer-Air Filter
	841314	Plate-Back Used on Type No(s). 1416.		692198	Screw (Muffler) (Used Before Code Date 97012400).	643A	690447	Retainer-Air Filter
577	690795	Cable-Starter				650	692539	Screw (Oil Deflector)
578	692306	Wire Assembly				663	692083	Screw (Control Panel)
578A	692319	Wire Assembly				664	691087	Nut (Key Switch)
578B	691377	Wire Assembly	615	691550	Retainer-Governor Shaft	668	690860	Spacer
596	691492	Screw (Oil Pump)	616	806685	Crank-Governor (Used After Code Date 99072000).	668A	691500	Spacer
597	690876	Screw (Pawl Friction Plate)				668B	691215	Spacer
597A	94463	Screw (Pawl Friction Plate)	616A	690899	Crank-Governor (Used Before Code Date 99072100).	674	692056	Screw (Fuel Tank Bracket) (M8 x 14)
598	807625	Shim-End Play (Crankshaft or Camshaft Bearing)				674B	692062	Screw (Fuel Tank Bracket) (M8 x 18)
601	691038	Clamp-Hose	620	494052	Panel-Speed Control	676	393761	Deflector-Muffler
601A	691145	Clamp-Hose	628	806660	Screw (Fuel Pump Bracket)	676A	397630	Deflector-Muffler
601B	95162s	Clamp-Hose				676C	495518	Deflector-Muffler
601C	691522	Clamp-Hose	629	806717	Spring-Throttle Return	676D	808394	Deflector-Muffler
608	692102	Starter-Rewind (Used After Code Date 93081500).	629A	806716	Spring-Throttle Return	677	810079	Screw (Muffler Deflector)
608A	808153	Starter-Rewind (Used Before Code Date 93081600).	629B	692088	Spring-Throttle Return Used on Type No(s). 0081, 0082, 0083, 1009, 1012, 1081, 1105, 1222, 1227, 1276, 1277, 1399.	677A	690688	Screw (Muffler Deflector)
613	692067	Screw (Muffler)				677B	690661	Screw (Muffler Deflector)
		----- Note -----	633	●690722	Seal-Choke/Throttle Shaft	681	808798	Kit-Needle/Seat
	692328	Screw (Muffler) Used on Type No(s). 1184, 1405, 1409, 1414, 1421.	633B	806131	Seal-Choke/Throttle Shaft	683	691029	Nut (Starter Solenoid)
	692581	Screw (Muffler) Used on Type No(s). 1154, 1158, 1246, 1311, 1315, 1318, 1402.	633C	●808022	Seal-Choke/Throttle Shaft	689	691272	Spring-Friction (Governor Control Rod)
			635	692076	Boot-Spark Plug	689A	262564	Spring-Friction (Rewind Starter)
			638	691551	Washer (Cylinder Head Cover)(Internal Tooth Lockwasher) (Used Before Code Date 03110100).	691	690680	Seal-Governor Shaft
						695	693149	Screw (Ring Gear)
						697	692062	Screw (Drive Cap)
						703	94484	Clip
						710	807689	Cover-Oil Filter

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
711	841233	Screw (Carburetor Shield)	789	691996	Harness--Wiring ----- Note -----	812	Δ692055	Nut (Rocker Cover)
718	806469	Pin--Locating		691578	Harness-- Wiring			(Used Before Code Date 01120300).
718A	690760	Pin--Locating Used on Type No(s). 0118, 0124, 0158, 1118, 1158, 1195, 1217, 1311, 1318, 1402, 1409, 1414, 1421.			Used on Type No(s). 1009, 1012, 1057, 1241, 1264, 1276, 1288, 1299.	813	690635	Clamp
					841318 Harness-- Wiring	816	690706	Washer (Oil Filter Adapter)
718B	690740	Pin--Locating Used on Type No(s). 0136, 0144, 1136, 1144, 1244, 1308, 1316.			Used on Type No(s). 1268, 1312.	819	692056	Screw (Muffler Bracket)
725A	805702	Shield--Heat	797	691029	Nut (Brush Retainer)	819A	690943	Screw (Muffler Bracket)
725B	691498	Shield--Heat	797A	693167	Nut (Brush Retainer)	819C	692537	Screw (Muffler Bracket)
725C	806102	Shield--Heat						----- Note -----
726		Gear--Ring (Steel)(See Reference 23 for Service)	801	808778	Cap--Drive			692067 Screw (Muffler Bracket)
			801B	691283	Cap--Drive			Used on Type No(s). 1266, 1300, 1399, 1410, 1413.
			801C		Cap--Drive (For Replacement Starter Motor, Order Reference 309B)	819D	692062	Screw (Muffler Bracket)
726A	807805	Gear--Ring				830	809157	Stud--Rocker Arm (Used After Code Date 96033100).
727	841313	Cover--Starter Drive	802	496813	Cap--End			----- Note -----
728B	691514	Screw (Heat Shield)	802A	691286	Cap--End			691497 Stud--Rocker Arm
			802B		Cap--End (For Replacement Starter Motor, Order Reference 309B)			(Used Before Code Date 96040100).
729	690586	Clip--Wire				832	691571	Guard--Muffler
732	690688	Screw (Starter Drive Cover)	803	690854	Housing--Starter (3 7/16" Housing Length)	833	841233	Screw (Air Cleaner Mounting Strap/Stud)
732A	841233	Screw (Starter Drive Cover)				833A	690872	Screw (Air Cleaner Mounting Strap/Stud)
737	690679	Screw (Oil Filter Adapter)	803A	693547	Housing--Starter (3 13/16" Housing Length)	833B	691593	Screw (Air Cleaner Mounting Strap/Stud)
739	690451	Clip--Debris						
741	691530	Gear--Timing	803B		Housing--Starter (Serviced By 499521 Starter Motor Only)	836	691514	Screw (Muffler Guard)
748	692083	Screw (Control Rod Clip)	803C	494205	Housing--Starter (4 3/8" Housing Length)	836A	692067	Screw (Muffler Guard)
773	690875	Retainer				837	808085	Spacer--Muffler (Includes 2)
774	692067	Screw (Stop Wire)			----- Note -----			
783	695708	Gear--Pinion (Services Aluminum Ring Gear Only)			398892 Housing-- Starter			
788	691559	Bracket--Fuel Pump			(4 9/16" Housing Length)			
			807	805557	Spacer--Throttle			

★ Included in Engine Gasket Set--Ref. No. 358.

● Included in Carburetor Overhaul Kit--Ref. No. 121.

◆ Included in Carburetor Gasket Set--Ref. No. 977.

Δ Included in Valve Gasket Set--Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

350400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
840	842828	Kit-Panel (Used After Code Date 06011800). ----- Note ----- 692096 Kit-Panel (Used Before Code Date 06011900).	877B	393537	Wire/Connector-Alternator (Green)(Single Socket)	955B	807927	Plug-Carburetor (Jet)
842	690611	Seal-O Ring (Dipstick Tube)	877C	399916	Wire/Connector-Alternator	957	491367s	Cap-Fuel Tank (Plastic)
843	691322	Sleeve-Lever	877D	698092	Wire/Connector-Alternator	957A	493988s	Cap-Fuel Tank (Plastic)
849	691088	Screw (Stub Shaft)	878	691237	Harness-Alternator Used on Type No(s). 1277.	958	698182	Valve-Fuel Shut Off (Plastic)
851	493880s	Terminal-Spark Plug	878B	691362	Harness-Alternator	958B	692008	Valve-Fuel Shut Off (Plastic)
862	692153	Strap/Stud-Air Cleaner Mounting	879	842829	Cover-Carburetor (Used After Code Date 06011900). ----- Note ----- 690757 Cover-Carburetor (Used Before Code Date 06011800).	967	272490s	Filter-Pre Cleaner
862D	691565	Strap/Stud-Air Cleaner Mounting	882	692074	Flange-Exhaust	967C	271794s	Filter-Pre Cleaner
862E	492133	Strap/Stud-Air Cleaner Mounting	883	★△691613	Gasket-Exhaust	968	699959	Cover-Air Cleaner (With Clips)
863	691513	Bracket-Muffler (Lo Mount) (Oil Filter Side)	884	690898	Clamp-Muffler	968C	691910	Cover-Air Cleaner
863A	690756	Bracket-Muffler (Lo Mount)(Starter Motor Side)	884A	691956	Clamp-Muffler	968E	691334	Cover-Air Cleaner
863B	805610	Bracket-Muffler	892	692318	Switch-Key	971	807084	Screw (Air Cleaner Base to Carburetor)
865	841312	Cover-Air Guide (Black)	896	691641	Pin-Drive Retainer	971B	692537	Screw (Air Cleaner Base to Carburetor)
865A	841319	Cover-Air Guide (Black) ----- Note ----- 690908 Cover-Air Guide (Black) Used on Type No(s). 0124, 0139, 1111, 1139, 1206.	899	691077	Washer (Starter Solenoid)	972	492369	Tank-Fuel (Plastic)(7 Quart)
868	691963	Seal-Valve	915	691493	Liner-Port	972A	690663	Tank-Fuel (Plastic)(9 Quart)
871	692057	Bushing-Valve Guide	918	393815	Hose-Vacuum (Cut To Required Length)	987	492172	Seal-Throttle Shaft
876	696539	Kit-Pinion Spring	920	691656	Solenoid-Starter	988	★692063	Gasket-Oil Adapter
877	393456	Wire/Connector-Alternator (White Dual Socket)	927	691116	Screw (Electronic Governor Module)	988A	690687	Gasket-Oil Adapter (Used With Reference 710 Only)
			934	691058	Screw (Fan Retainer)	990	691959	Key Set
			947A	692094	Solenoid-Fuel	994	392390	Arrestor-Spark ----- Note ----- 808361 Arrestor-Spark Used on Type No(s). 1289.
			947B	807922	Solenoid-Fuel	996A	691577	Shield-Carburetor
			949	690475	Guard-Debris Screen	1004	690743	Duct-Air
			949A	808226	Guard-Debris Screen			
			955A	807723	Plug-Carburetor (Jet)			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1005	809441	Fan-Flywheel (Used After Code Date 00121200). ----- Note ----- 690911 Fan-Flywheel (Used Before Code Date 00121300).	1028	808033	Adapter-Oil Filter (For Horizontal Mounted Oil Filter) ----- Note ----- 808235 Adapter-Oil Filter	1090	691293	Retainer-Brush
1006	690452	Retainer-Fan	1029	807323	Arm-Rocker	1091	●691516	Cap-Limiter
1009	806474	Screw (Starter Motor)	1030	691496	Support-Rocker Arm (Used Before Code Date 96040100).	1091A	●806054	Cap-Limiter
1012	690592	Retainer-Link	1031	690693	Shaft-Rocker Arm (Used Before Code Date 96040100).	1095A	808391	Gasket Set-Valve (Used Before Code Date 01120300).
1012A	691521	Retainer-Link	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)	1095B	841191	Gasket Set-Valve (Used After Code Date 01120200).
1017	690900	Screen-Oil Pump	1037	●807915	Ball-Choke Locator	1100	791959	Pivot-Rocker Arm
1019	808036	Kit-Label	1038	492374	Rod-Fuel Shut Off	1119	691552	Screw (Alternator)
1022★△806039s		Gasket-Rocker Cover	1038A	691567	Rod-Fuel Shut Off	1127	94460	Screw (Float Bowl)
1023	690758	Cover-Rocker	1044A	805756	Screw (Flywheel)	1133	690342	Screw (Crankshaft)
1023B	691494	Cover-Rocker	1046	692082	Plug-Blower Housing	1134A	94464	Washer (Pawl Friction Plate)
1023C	690910	Cover-Rocker (Cylinder 1) (With Fuel Pump) (Used After Code Date 98053100).	1047	841580	Shaft-Stub	1135	806497	Washer (Crankcase Cover/Sump)
1023D	691558	Cover-Rocker (Cylinder 1) (With Fuel Pump) (Used Before Code Date 98060100).	1048	690669	Module-Electronic Governor	1148	94504	Screw (Clip)
1023E	691531	Cover-Rocker (Used On Engines Equipped With 9 Quart Fuel Tanks)	1051	691124	Ring-Retaining	1176	842067	Nut (Exhaust Manifold)
1024	693185	Pump-Oil	1051A	691265	Ring-Retaining	1254	807084	Screw (Rocker Cover Stud) (Used After Code Date 01120200).
1025	690689	Spool-Governor	1054A	280275	Tie-Cable	1330	272144	Repair Manual
1026	691836	Rod-Push (Steel) ----- Note ----- 691758 Rod-Push (Aluminum)	1058	276343	Operator's Manual	1346	492031	Valve-Oil Drain Shut Off Used on Type No(s). 1311, 1318, 1421.
1027	492932s	Filter-Oil (2 1/4" Long) (Used After Code Date 95020200). ----- Note ----- 491056 Filter-Oil (3 1/4" Long) (Used Before Code Date 95020600).	1059	698516	Kit-Screw/Washer			
			1083	691626	Nut (End Cap)			
			1083A	690958	Nut (End Cap)			

★ Included in Engine Gasket Set-Ref. No. 358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No. 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.